

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit.).

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B0100/13 (DI-242)	• Short in D squib circuit	• Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
B0101/14 (DI-247)	• Open in D squib circuit	• Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
B0102/11 (DI-251)	• Short in D squib circuit (to Ground)	• Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
B0103/12 (DI-255)	• Short in D squib circuit (to B+)	• Steering wheel pad (squib) • Spiral cable • Airbag sensor assembly • Wire harness	ON
B0105/53 (DI-259)	• Short in P squib circuit	• Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness	ON
B0106/54 (DI-263)	• Open in P squib circuit	• Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness	ON
B0107/51 (DI-266)	• Short in P squib circuit (to Ground)	• Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness	ON
B0108/52 (DI-269)	• Short in P squib circuit (to B+)	• Front passenger airbag assembly (squib) • Airbag sensor assembly • Wire harness	ON
B0110/43 (DI-272)	• Short in front side squib (RH) circuit	• Front side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0111/44 (DI-276)	• Open in front side squib (RH) circuit	• Front side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0112/41 (DI-279)	• Short in front side squib (RH) circuit (to Ground)	• Front side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0113/42 (DI-282)	• Short in front side squib (RH) circuit (to B+)	• Front side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0115/47 (DI-285)	• Short in front side squib (LH) circuit	• Front side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0116/48 (DI-289)	• Open in front side squib (LH) circuit	• Front side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B0117/45 (DI-292)	• Short in front side squib (LH) circuit (to Ground)	• Front side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0118/46 (DI-295)	• Short in front side squib (LH) circuit (to B+)	• Front side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0130/63 (DI-298)	• Short in P/T squib (RH) circuit	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0131/64 (DI-302)	• Open in P/T squib (RH) circuit	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0132/61 (DI-305)	• Short in P/T squib (RH) circuit (to Ground)	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0133/62 (DI-308)	• Short in P/T squib (RH) circuit (to B+)	• Seat belt pretensioner RH (squib) • Airbag sensor assembly • Wire harness	Blink
B0135/73 (DI-311)	• Short in P/T squib (LH) circuit	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0136/74 (DI-315)	• Open in P/T squib (LH) circuit	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0137/71 (DI-318)	• Short in P/T squib (LH) circuit (to Ground)	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B0138/72 (DI-321)	• Short in P/T squib (LH) circuit (to B+)	• Seat belt pretensioner LH (squib) • Airbag sensor assembly • Wire harness	Blink
B1100/31 (DI-324)	• Airbag sensor assembly malfunction	• Airbag sensor assembly	ON
B1140/32 (DI-326)	• Side airbag sensor assembly (RH) malfunction	• Side airbag sensor assembly (RH) • Wire harness	Blink
B1141/33 (DI-334)	• Side airbag sensor assembly (LH) malfunction	• Side airbag sensor assembly (LH) • Wire harness	Blink
B1170/93 (DI-342)	• Short in rear side squib (RH) circuit	• Rear side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B1171/94 (DI-346)	• Open in rear side squib (RH) circuit	• Rear side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B1172/91 (DI-349)	• Short in rear side squib (RH) circuit (to Ground)	• Rear side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B1173/92 (DI-352)	• Short in rear side squib (RH) circuit (to B+)	• Rear side airbag assembly RH (squib) • Airbag sensor assembly • Wire harness	Blink
B1175/97 (DI-355)	• Short in rear side squib (LH) circuit	• Rear side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink

DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B1176/98 (DI-359)	• Open in rear side squib (LH) circuit	• Rear side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B1177/95 (DI-362)	• Short in rear side squib (LH) circuit (to Ground)	• Rear side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
B1178/96 (DI-365)	• Short in rear side squib (LH) circuit (to B+)	• Rear side airbag assembly LH (squib) • Airbag sensor assembly • Wire harness	Blink
Normal (DI-368)	• System normal	-	OFF
	• Voltage source drop	• Battery • Airbag sensor assembly	ON

HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a voltage source drops.
This malfunction is not stored in memory by the airbag sensor assembly and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the airbag sensor assembly is faulty.