


FUEL PUMP CHANGE RELAY INSPECTION

FI0LF-01

1. REMOVE FUEL PUMP CHANGE RELAY

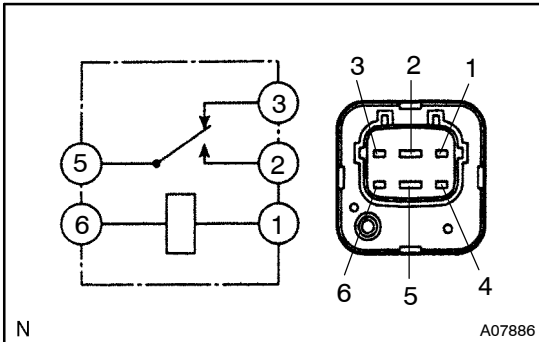


2. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that continuity exists between terminals 3 and 5.

If no continuity exists, replace the relay.

- (b) Check that continuity exists between terminals 2 and 5.

If no continuity exists, replace the relay.

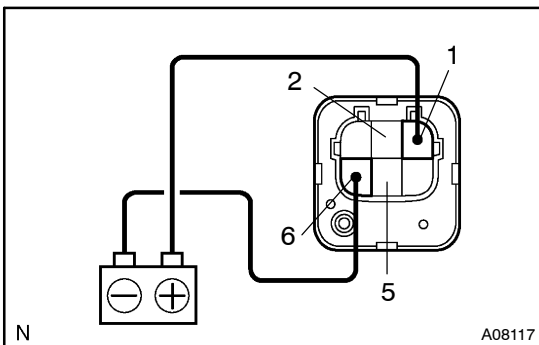

3. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 6.

- (b) Using an ohmmeter, check that continuity exists between terminals 2 and 5.

If continuity exists, replace the relay.

4. REINSTALL FUEL PUMP RELAY