

INSTALLATION

1. INSTALL LH AND RH ACTUATOR

- (a) Install the E-ring and stopper to the actuator.
- (b) Install the actuators, 2 washers, 2 nuts and 4 bolts.

2. INSTALL INTAKE AIR CONNECTOR LH AND RH

- (a) Install 4 new gasket, intake air connectors and 8 nuts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

- (b) Install 2 new throttle body gaskets and 8 mount bolts.

Torque: 21 N·m (215 kgf·cm, 15 ft·lbf)

3. INSTALL VACUUM TRANSMITTING PIPE NO.1 AND NO.2 WITH VACUUM CONTROL VALVE SET

4. INSTALL EMISSION CONTROL VALVE SET AND AIR CONNECTOR STAY

5. INSTALL AIR CLEANER ASSEMBLY LH AND RH WITH AIR FLOW METER

6. INSTALL V-BANK COVER AND INTAKE AIR CONNECTOR NO.1