
 



 

 





 
 
 

 



AUTOMATIC TRANSMISSION

SST (Special Service Tools)

PP22X-01

	09032-00100	Oil Pan Seal Cutter	
	09240-00020	Wire Gauge Set	
	09325-12010	Transmission Oil Plug	
	09350-30020	TOYOTA Automatic Transmission Tool Set	
	(09350-06120)	No.2 Measure Terminal	
	(09350-07020)	Oil Pump Puller	
	(09350-07040)	No.2 Piston Spring Compressor	
	(09350-07050)	No.3 Piston Spring Compressor	
	(09350-07060)	No.1 Snap Ring Expander	
	(09350-07070)	No.2 Snap Ring Expander	
	(09350-07080)	Brake Reaction Sleeve Puller	
	(09350-07090)	Brake No.1 Piston Puller	

	<p>(09350-07110) Oil Seal Replacer</p>	
	<p>(09351-32140) Oil Seal Replacer</p>	
	<p>09517-12010 Rear Axle Shaft Oil Seal Replacer</p>	
	<p>09950-60010 Replacer Set</p>	
	<p>(09951-00350) Replacer 35</p>	
	<p>09950-70010 Handle Set</p>	
	<p>(09951-07100) Handle 100</p>	