

INSTALLATION

1. Front:

INSTALL 2 BUSHINGS AND 2 SPACERS

2. Rear:

INSTALL BRACKET AND 2 BUSHINGS

3. INSTALL HEIGHT CONTROL VALVE

(a) Install the 2 nuts and the height control valve.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

(b) Connect the air tubes.

HINT:

- Coat the new O-rings with MP grease.
 - Push the air tube in straight to connect it until the clip makes "click" sound.
- (c) Install the holders.
- (d) Connect the connector.
- (e) Check for air leakage (See page SA-11).

4. Rear:

INSTALL LUGGAGE COMPARTMENT TRIM FRONT COVER AND FLOOR MAT

(See page BO-48)

5. Front:

INSTALL FRONT RIGHT FENDER LINER AND WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)