

INSTALLATION


INSTALL DRIVE BELT

(a) Set the belt at any part other than the water pump pulley.

HINT:

When setting the belt over tensioner and idler pulleys No. 1 and 2, the belt must contact them at its back.

(b) Turn drive belt tensioner clockwise, and set the belt around the water pump pulley.

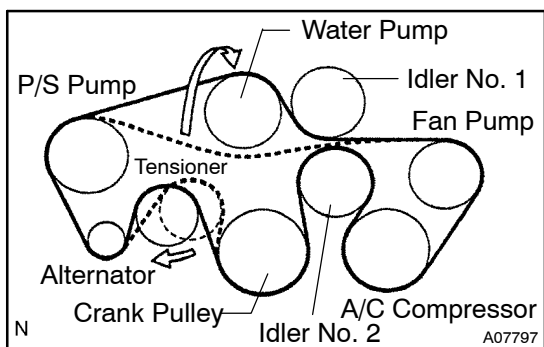

(c) Install the air cleaner inlet No. 1.