


INSTALLATION

1. INSTALL HYDRAULIC MOTOR GEAR PUMP

(a) Install the hydraulic motor gear pump and 3 bolts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

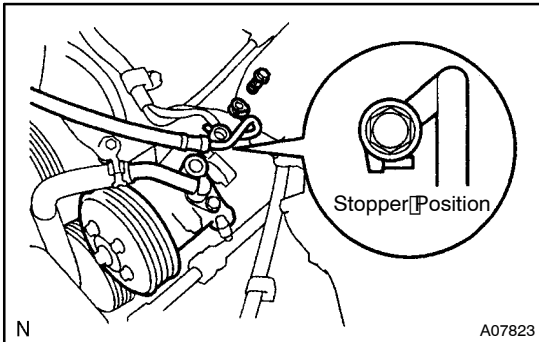

(b) Install a new gasket to the hydraulic pressure hose and connect it to the gear pump with the union bolt.

Torque: 64 N·m (650 kgf·cm, 46 ft·lbf)

(c) Connect the hydraulic motor suction hose.

(d) Connect the connector.

2. INSTALL V-RIBBED BELT (See page CO-7)

3. BLEED ELECTRONICALLY CONTROLLED HYDRAULIC COOLING FAN SYSTEM

(See page CO-20)

4. INSTALL AIR CLEANER ASSEMBLY WITH AIR FLOW METER LH

5. INSTALL AIR CLEANER INLET NO.1 AND V-BANK COVER