DI2SP-03

DTC	P1645/82	Body ECU Malfunction
-----	----------	----------------------

CIRCUIT DESCRIPTION

LH bank ECU receives the operating condition (ON/OFF) of A/C from A/C ECU and it also receives the electrical load information from the rear J/B ECU.

ECU uses these information to control the engine (idle up, etc.).

DTC No.	DTC Detecting Condition	Trouble Area
	Condition (a) or (b) continues for 5.0 seconds or more. (a) No communication from body ECU	Rear J/B ECU A/C ECU
1 10 10/02		Communication bus

INSPECTION PROCEDURE

Perform troubleshooting the Multiplex Communication System (See Pub. No. RM676E).