



INSTALLATION

Installation is in the reverse order of removal
(See page BR-12)

ADJUST PARKING BRAKE SWITCH

- (a) Check that the gap at the parking brake switch mounting part is within specification.

Standard Value:

RHD: 9.0 - 11.0 mm (0.35 - 0.43 in.)

LHD: 8.0 - 10.0 mm (0.31 - 0.39 in.)

- (b) If the gap is outside the standard value range, check the cushion rubber for deformation. If the rubber is deformed, replace it.

HINT:

After installation, check and adjust parking brake pedal
(See page BR-9)