

MAGNETIC VALVE REMOVAL

AC24F-01

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:


At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 1,000 ± 50 g (35.27 ± 1.76 oz.)

2. REMOVE LUGGAGE COMPARTMENT FRONT COVER (See [page BO-43](#))

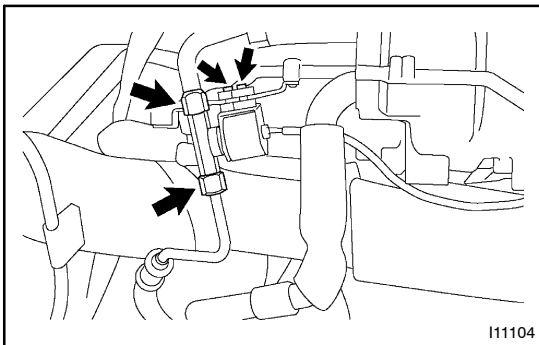

3. REMOVE MAGNETIC VALVE

(a) Loosen the 2 nuts and disconnect the liquid tube.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

(b) Remove the 2 screws and magnetic valve.