


TERMINALS OF ECU

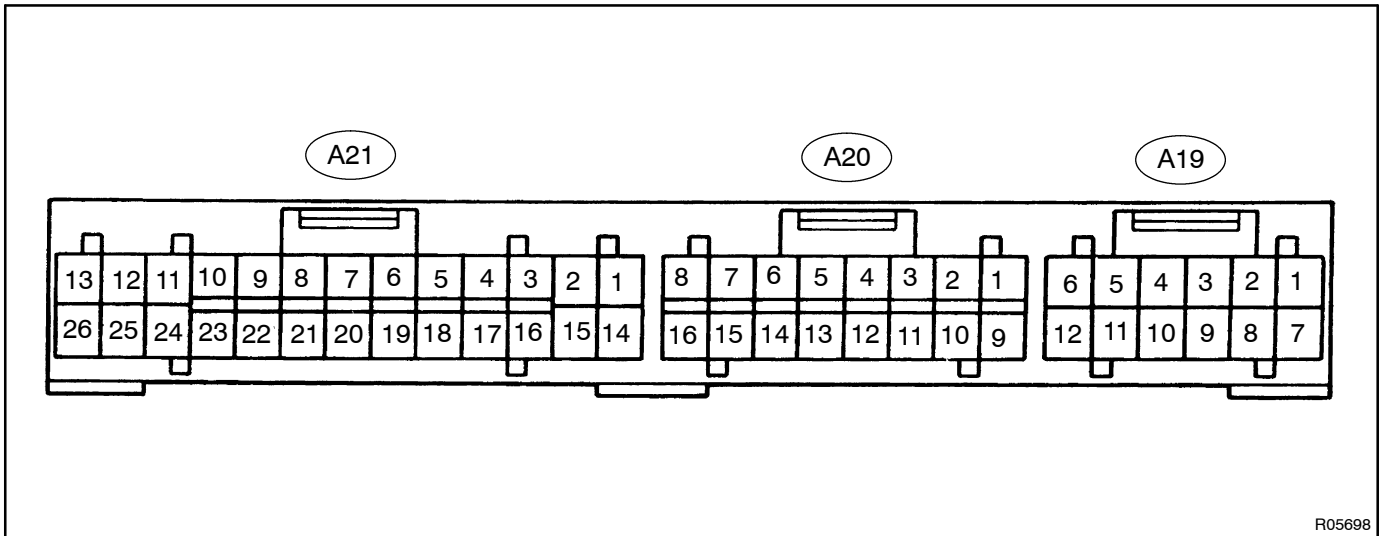

R05698

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
SFLR (A19 - 1) - GND (A21 - 15, 24)	Y - G ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
SFLH (A19 - 2) - GND (A21 - 15, 24)	L - R ↔ W - B	IG switch ON, ABS warning light OFF <small>D11AC-09</small>	10 - 14
SR (A19 - 4) - R+ (A19 - 6)	V - G ↔ V - Y	IG switch ON, ABS warning light OFF	Below 1.5
MT (A19 - 5) - GND (A21 - 15, 24)	L-W ↔ W-B	IG switch ON (Motor relay is OFF)	Below 1.5
SRRR (A19 - 7) - GND (A21 - 15, 24)	Y ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
SRRH (A19 - 8) - GND (A21 - 15, 24)	R ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
AST (A19 - 11) - GND (A21 - 15, 24)	Y - R ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
MR (A19 - 12) - R+ (A19 - 6)	V - R ↔ V - Y	IG switch ON	10 - 14
RR+ (A20 - 2) - RR- (A20 - 10)	R ↔ G	IG switch ON, slowly turn right rear wheel	A/C generation
STP (A20 - 4) - GND (A21 - 15, 24)	O ↔ W-B	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 - 14
RL+ (A20 - 9) - RL- (A20 - 1)	G-W ↔ BR	IG switch ON, slowly turn left rear wheel	A/C generation
IG1 (A20 - 11) - GND (A21 - 15, 24)	R ↔ W - B	IG switch ON	10 - 14
WA (A21 - 2) - GND (A21 - 15, 24)	P - G ↔ W - B	IG switch ON, ABS warning light ON	Below 2.0
		IG switch ON, ABS warning light OFF	10 - 14
FL+ (A21 - 5) - FL- (A21 - 18)	P ↔ V	IG switch ON, slowly turn left front wheel	A/C generation
SRLH (A21 - 11) - GND (A21 - 15, 24)	V - W ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
SRLR (A21 - 12) - GND (A21 - 15, 24)	L - B ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
SFRH (A21 - 13) - GND (A21 - 15, 24)	Y - B ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14

DIAGNOSTICS - ANTI-LOCK BRAKE SYSTEM

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
Ts (A21 - 14) - GND (A21 - 15, 24)	G ↔ W-B	IG switch ON and terminals Ts - E ₁ of check connector connected	Below 1.5
		IG switch ON and terminals Ts - E ₁ of check connector not connected	10 - 14
FR+ (A21 - 17) - FR- (A21 - 4)	*1G-W ↔ BR *2LG ↔ L	IG switch ON, slowly turn right front wheel	A/C generation
SFRR (A21 - 26) - GND (A21 - 15, 24)	L ↔ W - B	IG switch ON, ABS warning light OFF	10 - 14
LBL (A21 - 7) - GND (A21 - 15, 24)	R - G ↔ W - B	IG switch ON, Fluid in M/C reservoir below MIN level	8 - 14
SRC (A21 - 9) - GND (A21 - 15, 24)	V - R ↔ W - B	IG switch ON	10 - 14
SMC (A21 - 10) - GND (A21 - 15, 24)	V ↔ W - B	IG switch ON	10 - 14
SPC (A21 - 25) - GND (A21 - 15, 24)	V - Y ↔ W - B	IG switch ON	10 - 14

*1: LHD

*2: RHD