

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Transmission housing x Transmission case	14 mm	34	345	25
	17 mm	57	580	42
Extension housing x Transmission case		34	345	25
Breather hose x Transmission housing		7.4	75	65 in.·lbf
Parking lock pawl bracket x Transmission case		7.4	75	65 in.·lbf
O/D support x Transmission case		25	260	19
Oil pump x Transmission case		21	215	16
Valve body x Transmission case		10	100	7
Upper valve body x Lower valve body		6.4	65	56 in.·lbf
Detent spring x Lower valve body		10	100	7
Oil strainer x Valve body		10	100	7
ATF Temp. sensor clamp set bolt		6.6	68	58 in.·lbf
Oil pan x Transmission case		7.4	75	65 in.·lbf
Drain plug		20	205	15
Speed sensor x Transmission case		5.4	55	48 in.·lbf
O/D direct clutch speed sensor x Transmission case		5.4	55	48 in.·lbf
Solenoid wiring x Transmission case		5.4	55	48 in.·lbf
Transmission output flange lock nut		123	1,250	90
Union x Transmission case		29	300	22
Elbow x Transmission case		29	300	22
Neutral start switch	Adjusting bolt	13	130	9
	Nut	6.9	70	61 in.·lbf
Control shaft lever		16	160	12