

INSPECTION

1. INSPECT FRONT SEAT INNER BELT BUCKLE SWITCH CONTINUITY


Right side:

Condition	Terminal	Specified condition
When connected	1 - 2	Continuity
When disconnected	1 - 2	No continuity

Left side:

Condition	Terminal	Specified condition
When connected	1 - 6	Continuity
	2 - 6	Continuity
When disconnected	1 - 6	No continuity
	2 - 6	Continuity


If continuity is not as specified, replace the switch.

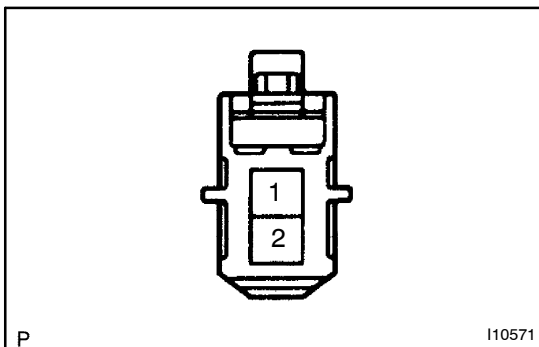

2. INSPECT FRONT SEAT OUTER BELT ELECTRICAL TENSION REDUCER OPERATION

- (a) Check that the solenoid energizes, by checking the plunger pulled operation sounds, when connector terminals 1 and 2 are connected to battery (+) and (-), respectively.
- (b) Pull out the seat belt and disconnect the battery (-) terminal. Check that the rewinding spring force increases.


If operation is not as specified, replace the solenoid.

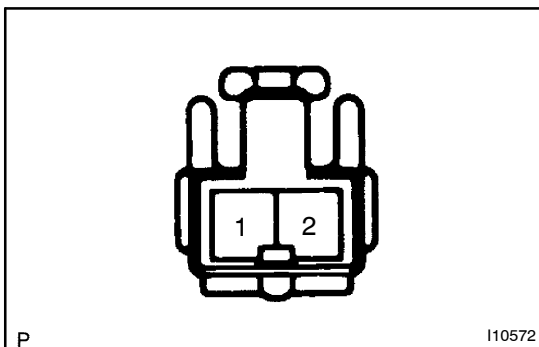

3. INSPECT REAR SEAT INNER BELT CONTINUITY

- (a) Check that there is continuity between terminals 1 and 2 when the outer belt plate is connected to the buckle.
- (b) Check that there is no continuity between terminals 1 and 2 when the outer belt plate is disconnected to the buckle.

If operation is not as specified, replace the buckle.

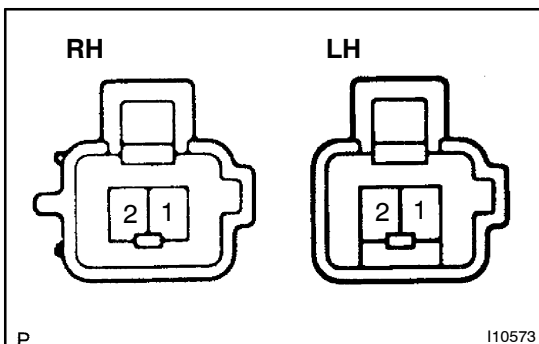

4. INSPECT REAR SEAT OUTER BELT ELECTRICAL TENSION REDUCER OPERATION

- (a) Check that the solenoid energizes, by checking the plunger pulled operation sounds, when connector terminals 1 and 2 are connected to battery (+) and (-), respectively.
- (b) Pull out the seat belt and disconnect the battery (-) terminal. Check that the rewinding spring force increases.

If operation is not specified, replace the solenoid.