

REMOVAL

1. **REMOVE INTAKE AIR CONNECTOR NO.1 AND V-BANK COVER**
2. **REMOVE AIR CLEANER ASSEMBLY LH AND RH WITH AIR FLOW METER**
3. **REMOVE EMISSION CONTROL VALVE SET AND AIR CONNECTOR STAY**
4. **REMOVE VACUUM TRANSMITTING PIPE NO.1 AND NO.2 WITH VACUUM CONTROL VALVE SET**
5. **REMOVE INTAKE AIR CONNECTOR LH AND RH**
 - (a) Remove the 8 throttle valve mount bolts and 2 gaskets.
 - (b) Disconnect the 2 hoses.
 - (c) Remove the 8 nuts, air intake connector LH and RH and 4 gaskets.
6. **REMOVE INTAKE AIR CONTROL VALVE ACTUATORS**
 - (a) Remove the 2 nuts, 2 washers, 4 bolts and 2 control valve actuators.
 - (b) Remove the E-ring and stopper from each actuator.