

## REMOVAL

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. DISCONNECT CONNECTOR
3. REMOVE REAR ACCELERATION SENSOR

Remove the bolt and rear acceleration sensor.