

## HEATER RADIATOR REMOVAL


AC00S-02

### 1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all coolant.

### 2. REMOVE INSTRUMENT PANEL (See page BO-96)

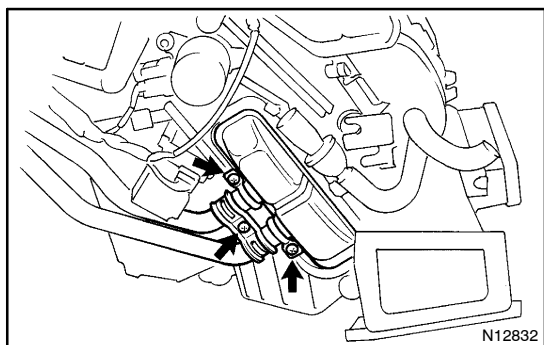

### 3. REMOVE HEATER RADIATOR

- (a) Remove the screw and clamp.
- (b) Remove the 2 screws, 2 clamps and disconnect the heater radiator pipes.
- (c) Pull out the heater radiator.
- (d) Remove the 2 O-rings.

HINT:

At the time of installation, please refer to the following item.

Do not reuse 2 O-rings.