


## Illumination circuit

### CIRCUIT DESCRIPTION

Receiving the courtesy signal from either of the door ECU, the Body ECU will make the interior light, ignition light, and foot light come on.

# WIRING DIAGRAM

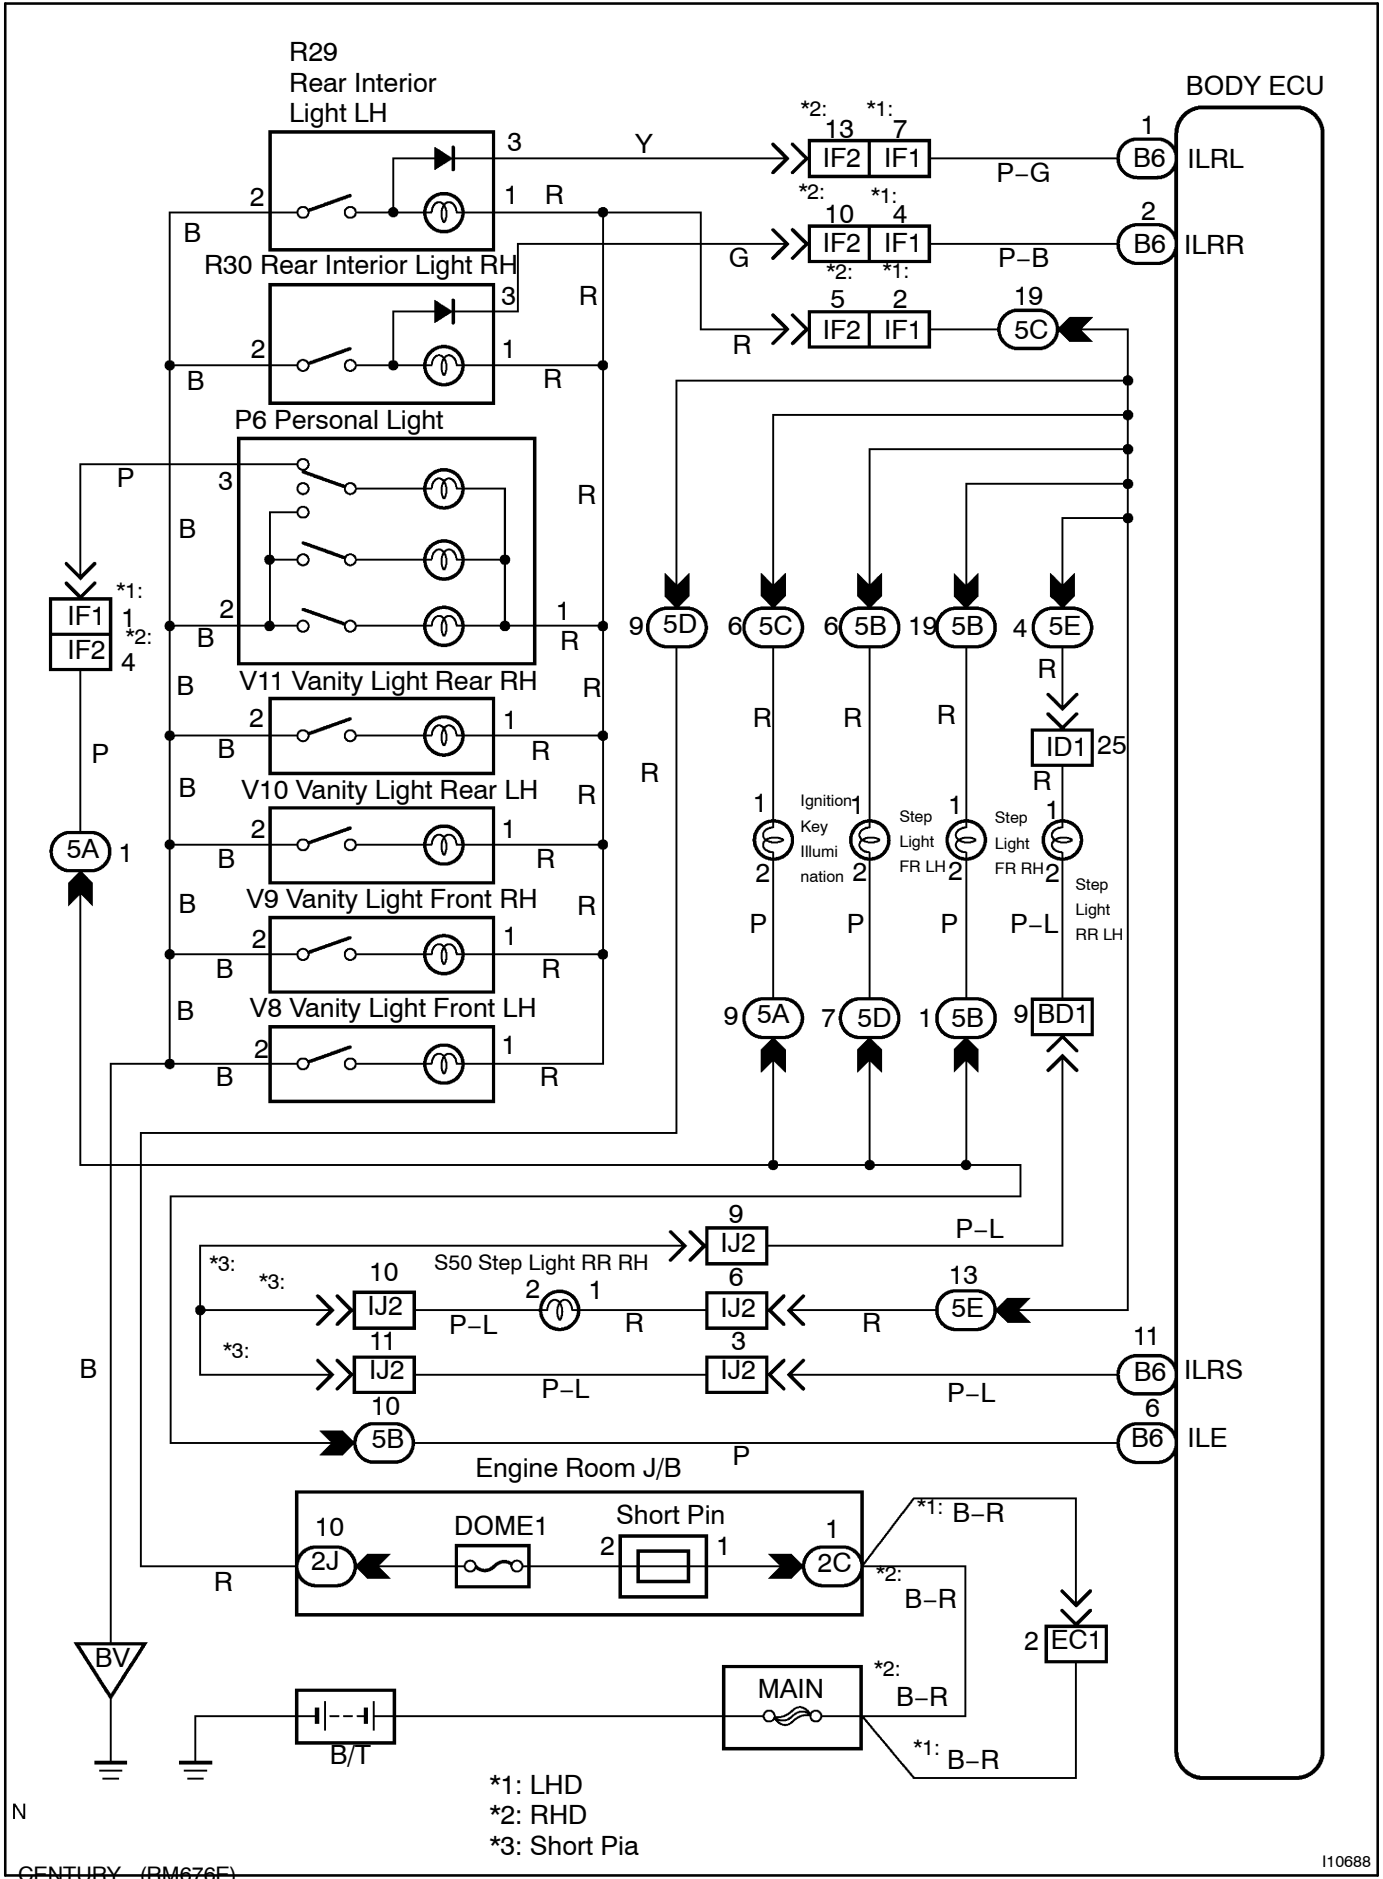

**INSPECTION PROCEDURE**

1 Check illumination light (Interior light system) (See page BE-2).

NG

Replace the failure light.

OK

2 Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-488).