


ROOM TEMPERATURE SENSOR INSPECTION

AC24Q-01

1. REMOVE ROOM TEMPERATURE SENSOR

- (a) Remove the instrument panel pad lower.
- (b) Disconnect the connector and aspirator hose.
- (c) Remove the screw and sensor.

2. INSPECT ROOM TEMPERATURE SENSOR CIRCUIT (See [page DI-783](#))

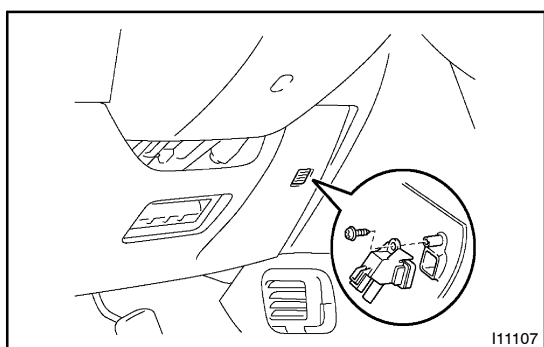

3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Install the sensor with the screw.
- (b) Connect the connector and aspirator hose.
- (c) Install the instrument panel pad lower.