


TENR terminal (Ignition switch signal)

WIRING DIAGRAM

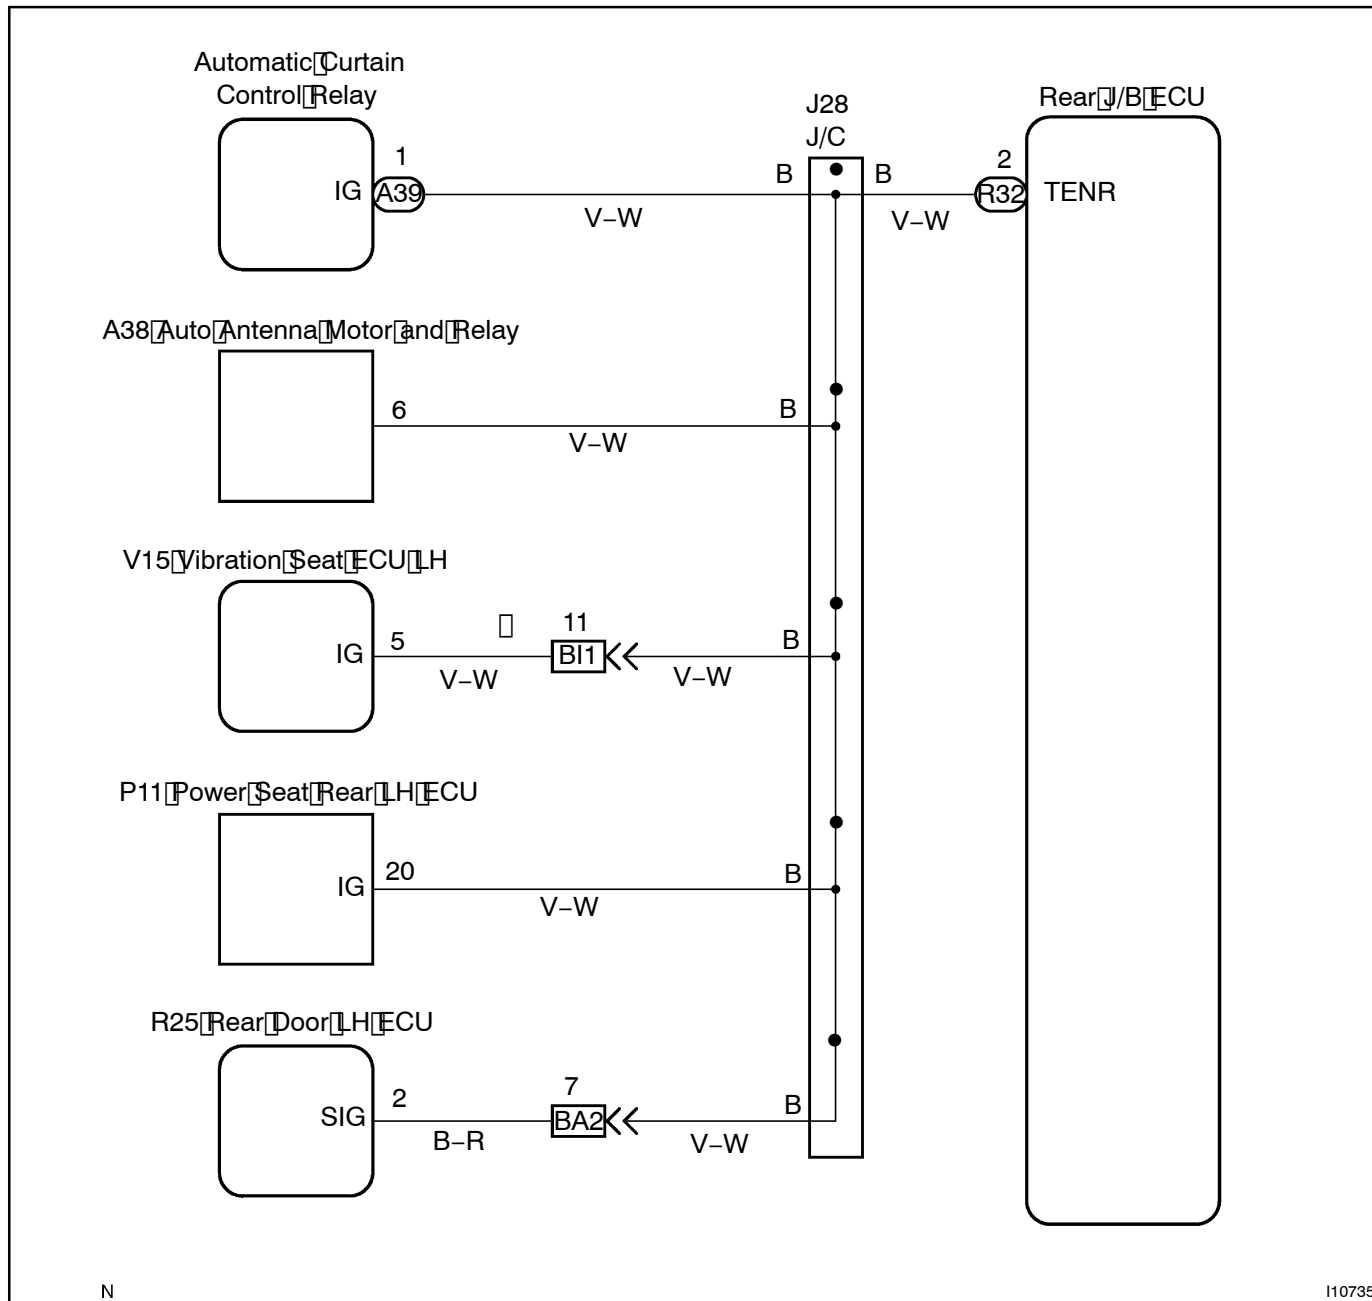

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check wireharness and connector between auto antenna relay and rear J/B ECU, power seat LH ECU and rear J/B ECU, vibration seat ECU and rear J/B ECU, automatic curtain relay and rear J/B ECU, rear door LH ECU and rear J/B ECU. |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table
(See [page DI-665](#)).