

REMOVAL

1. REMOVE AIR CLEANER COVER WITH AIR FLOW METER

- (a) Disconnect the 2 air flow meter connectors from LH and RH air flow meter.
- (b) Disconnect the air flow meter wire from the wire clamp on each cleaner cover.
- (c) Disconnect the air cleaner hose No.1 and No.2 from the air flow meters.
- (d) Disconnect the 4 clamps and remove each air cleaner cover with air flow meter.

2. REMOVE AIR FLOW METER

Remove the 2 bolts and LH and RH air flow meter from the cleaner cover.