

REMOVAL

1. REMOVE FRONT BUMPER

2. DISCONNECT 2 HOSES

Disconnect the 2 return hoses from cooling fan oil cooler.

3. REMOVE COOLING FAN OIL COOLER

Remove the 2 nuts and oil cooler.