

INSTALLATION

1. INSTALL HYDRAULIC GEAR MOTOR

- (a) Install the gear motor to the fan shroud stay with the 3 bolts.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

- (b) Install the fan and nut, and tighten the nuts counterclockwise.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)


- (c) Install the fan shroud and 4 bolts.

Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)

2. INSTALL COOLING FAN ASSEMBLY WITH HYDRAULIC GEAR MOTOR

- (a) Install the fan assembly with the hydraulic gear motor and 4 bolts.

Torque: 5.0 N·m (50 kgf·cm, 43 ft·lbf)

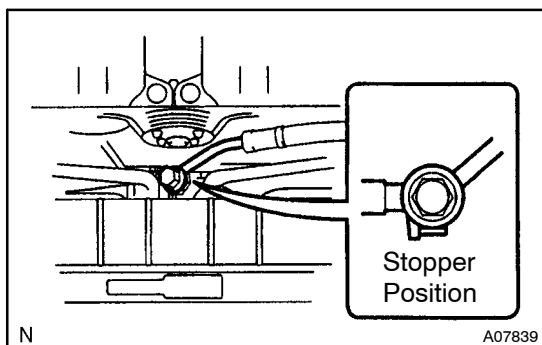

- (b) Install a new gasket to the pressure hose and connect it to the hydraulic gear motor with the union bolt.

Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)

- (c) Connect the hydraulic motor return hose to the motor and 2 hose clamps.

3. CONNECT RADIATOR UPPER HOSE

4. FILL ENGINE COOLANT (See page CO-2)

5. INSTALL AIR CLEANER INLET NO.1 AND ENGINE UNDER COVER