


INSPECTION

1. INSPECT TURN SIGNAL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Left turn	6 - 7	Continuity
Neutral	-	No continuity
Right turn	7 - 8	Continuity


If continuity is not as specified, replace the switch.

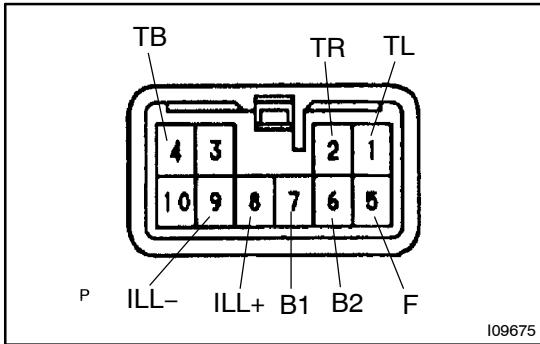

2. INSPECT HAZARD WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch OFF	5 - 7	Continuity
Switch ON	5 - 6	Continuity
	1 - 2 - 4	
Illumination circuit	8 - 9	Continuity


If continuity is not as specified, replace the switch.

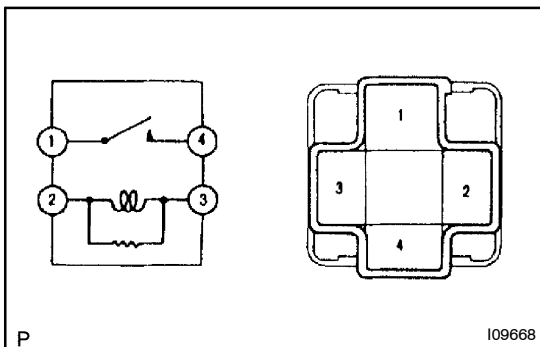

3. INSPECT CORNERING LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 3	Continuity
Apply B+ between terminals 2 and 3.	1 - 4	Continuity

If continuity is not as specified, replace the relay.

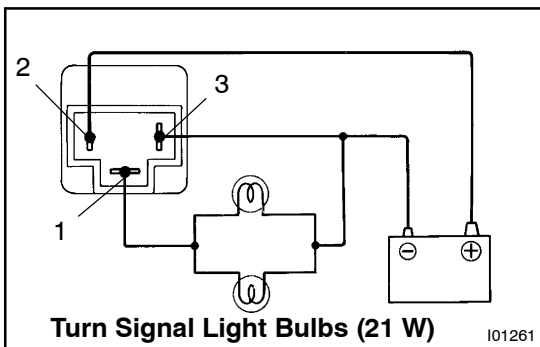

4. INSPECT TURN SIGNAL FLASHER OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- Connect the 2 turn signal light bulbs in parallel to each other to terminals 1 and 3, check that the bulbs flash.

HINT:

The turn signal lights should flash 60 to 120 times per minute. If one of the front or rear turn signal lights has an open circuit, the number of flashes will be more than 140 per minute.

If operation is not as specified, replace the flasher.