


## REMOVAL

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT AND TRIM FRONT COVER
2. DISCONNECT CONNECTOR
3. REMOVE REAR WHEEL

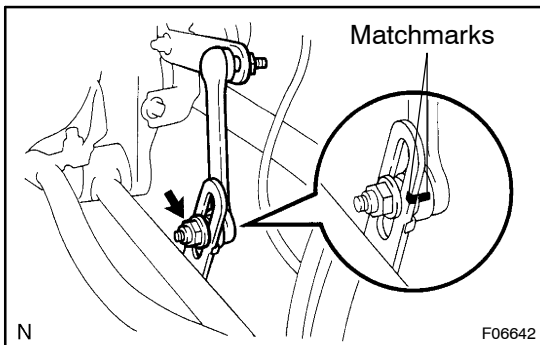

4. **DISCONNECT HEIGHT CONTROL SENSOR LINK**
  - (a) Place matchmarks on the height control sensor link and bracket.
  - (b) Remove the nut and disconnect the sensor link.
5. **REMOVE REAR HEIGHT CONTROL SENSOR**

Remove the 2 bolts and rear height control sensor.