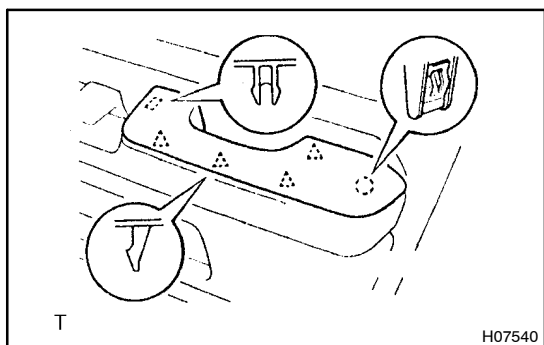


DISASSEMBLY

NOTICE:

- Whenever you carry out a job subject to influence the rear door glass fully closed position, always conduct the adjustment specified in detection switch adjustment (See page BO-32).
- Jobs requiring the detection switch adjustment:
 - Detachment/attachment of door glass
 - Door fitting adjustment
 - Detachment/attachment of window frame
 - Detachment/attachment of power window motor
- Operate the rear door power window with the vehicle wire harness and multiplex network switch being connected.
- After adjustment of the detection switch, check the power window pinching prevention function (See page BE-87).

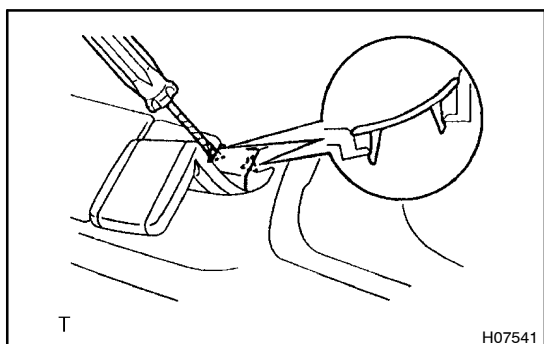


1. REMOVE REAR DOOR ARMREST

Using a screwdriver, remove the rear door armrest.

HINT:

Tape the screwdriver tip before use.

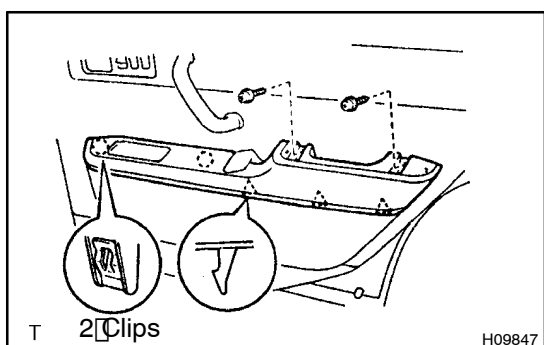


2. REMOVE DOOR ARMREST CAP

Using a screwdriver, remove the door armrest cap.

HINT:

Tape the screwdriver tip before use.



3. REMOVE REAR DOOR TRIM UPPER PANEL

(a) Remove the 2 screws.

(b) Using a screwdriver, remove the rear door trim upper panel.

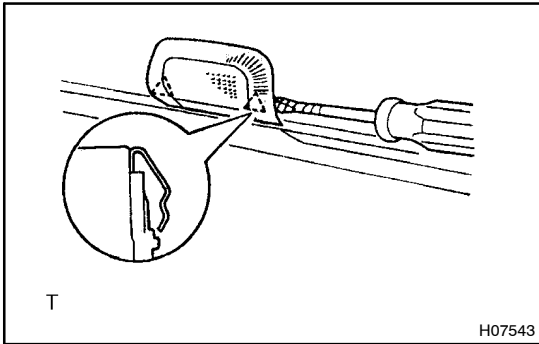
HINT:

Tape the screwdriver tip before use.

4. REMOVE DOOR INSIDE HANDLE

5. w/ Window curtain:

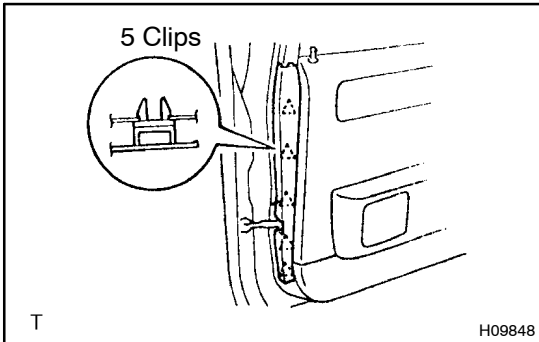
REMOVE WINDOW CURTAIN ASSEMBLY

**6. REMOVE COURTESY LIGHT**

Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

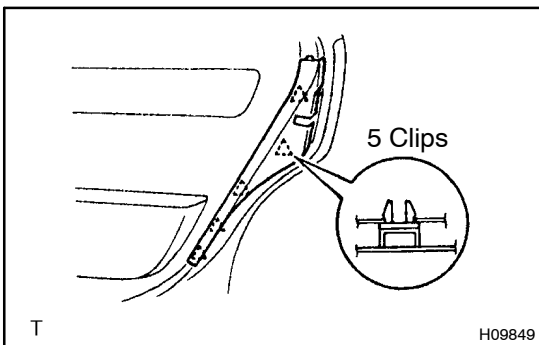
Tape the screwdriver tip before use.

**7. REMOVE SIDE TRIM BOARD REAR COVER**

Using a screwdriver, remove the side trim board rear cover.

HINT:

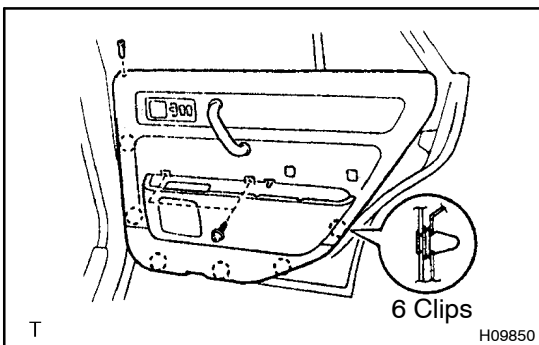
Tape the screwdriver tip before use.

**8. REMOVE SIDE TRIM BOARD REAR NO.2 COVER**

Using a screwdriver, remove the side trim board rear No.2 cover.

HINT:

Tape the screwdriver tip before use.

**9. REMOVE REAR DOOR TRIM**

- (a) Remove the door lock control knob.
- (b) Remove the 2 screws.
- (c) Insert a screwdriver between the door and door trim to pry the trim out.

NOTICE:

Be careful not to damage the door and door trim.

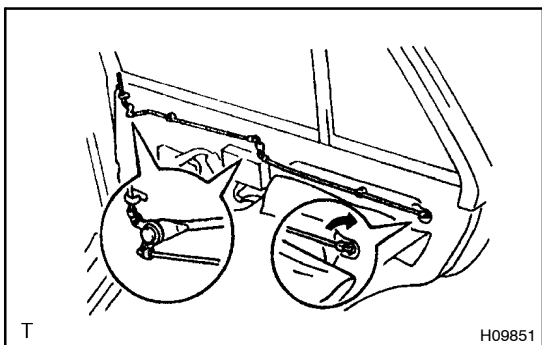
HINT:

Tape the screwdriver tip before use.

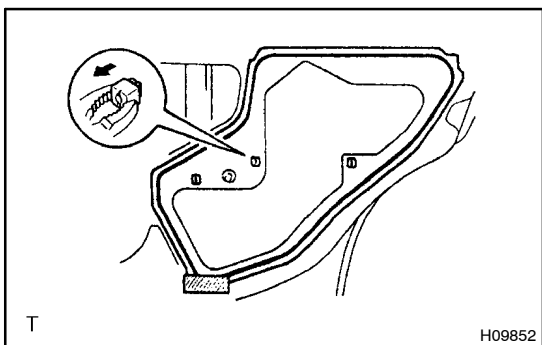
- (d) Pull the trim upward to remove it.
- (e) Disconnect the connector.
- (f) Remove the 4 screws and door trim switch from the door trim.
- (g) w/ Window curtain:
Remove the curtain rail holder.

10. REMOVE SPEAKER**11. REMOVE TWEETER SPEAKER**

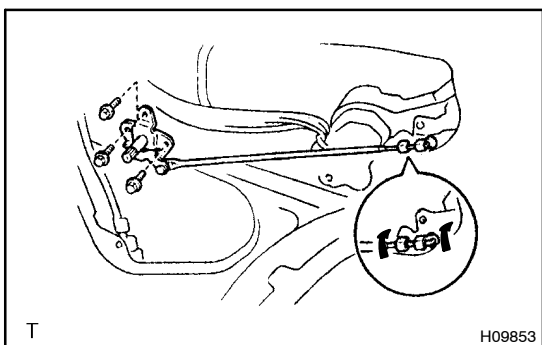
BODY - REAR DOOR

**12. REMOVE REAR DOOR INSIDE LOCKING LINK**

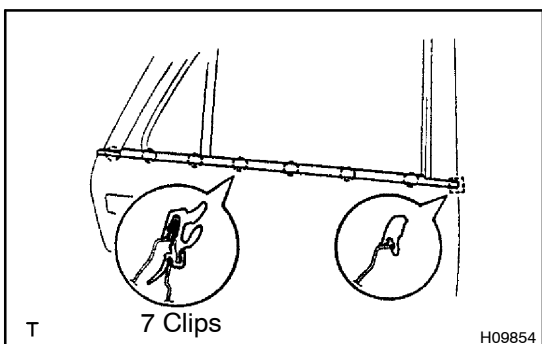
- (a) Disconnect the link from the door closer.
- (b) Using a clip remover, remove the rear door inside locking link and 2 clips.

**13. REMOVE REAR DOOR SERVICE HOLE COVER**

- (a) Remove the 3 grommets.
- (b) Remove the rear door service hole cover.

**14. REMOVE REAR DOOR LOCK CONTROL LINK**

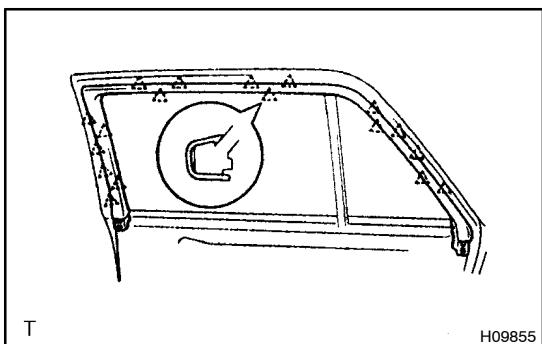
- (a) Disconnect the control link from the door closer.
- (b) Remove the 3 bolts and rear door lock control link.

**15. REMOVE REAR DOOR BELT MOULDING**

Using a screwdriver, remove the rear door belt moulding.

HINT:

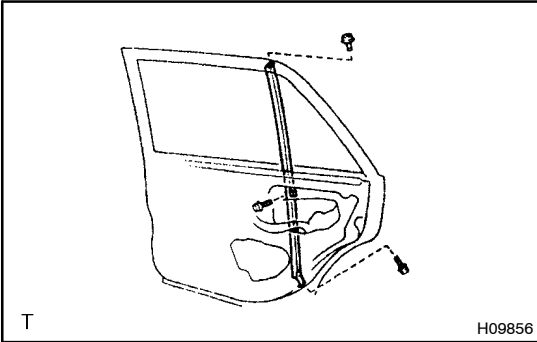
Tape the screwdriver tip before use.

**16. REMOVE REAR DOOR FRAME GARNISH**

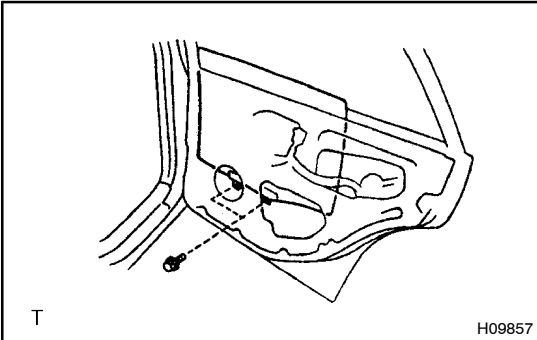
- (a) w/ Window curtain:
Remove the screw and curtain rail clamp.
- (b) Using a scraper, remove the rear door frame garnish.

HINT:

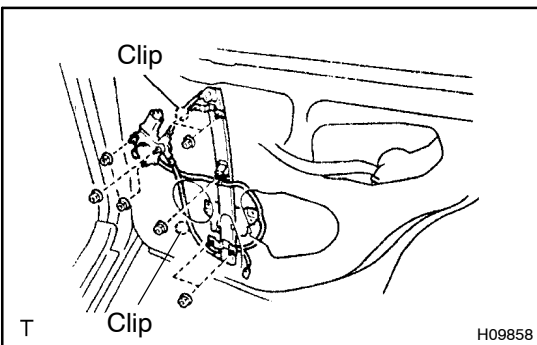
Tape the scraper tip before use.

**17. REMOVE REAR DOOR DIVISION BAR**

Remove the 2 bolts, screw and rear door division bar.

18. REMOVE REAR DOOR GLASS RUN**19. REMOVE REAR DOOR QUARTER WINDOW GLASS WITH WEATHERSTRIP****20. REMOVE REAR DOOR GLASS**

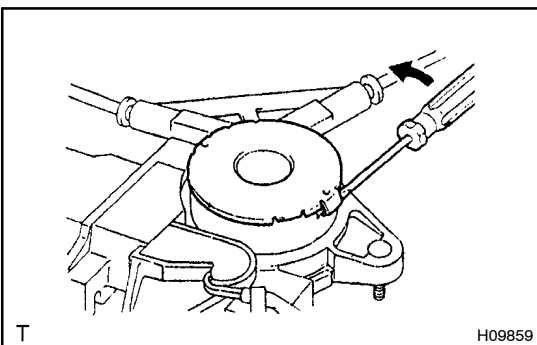
Remove the 2 bolts and rear door glass.

**21. REMOVE REAR DOOR POWER WINDOW REGULATOR**

Disconnect the connector, then remove the 8 nuts and rear door power window regulator.

HINT:

Remove the window regulator through the service hole.

**22. If replacing the window regulator:****REMOVE WINDOW REGULATOR FROM MOTOR**

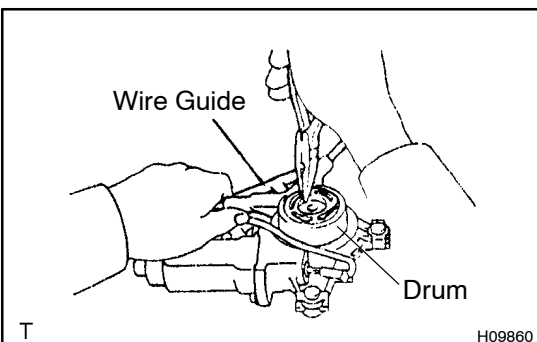
- (a) Using a screwdriver, pry up the cover plate tab and remove the cover plate.

NOTICE:

Do not damage the motor housing.

HINT:

Tape the screwdriver tip before use.



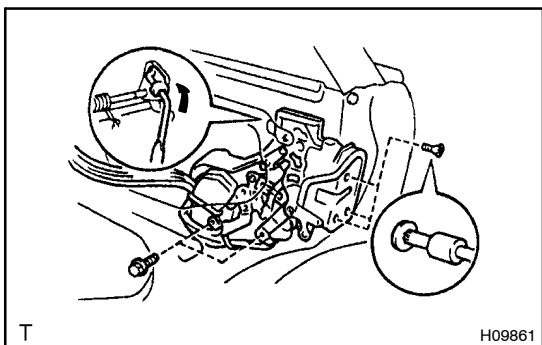
- (b) Using needle nose pliers, remove the drum and wire guide from the motor.

NOTICE:

Do not use a screwdriver etc. to help remove them.

23. REMOVE DOOR LOCK REMOTE CONTROL BASE PLATE

BODY - REAR DOOR

**24. REMOVE REAR DOOR CLOSER**

- (a) Disconnect the connector.
- (b) Disconnect the link from the outside handle.
- (c) Remove the bolt.
- (d) Using a torx wrench, remove the 3 screws and door closer.

Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)

HINT:

Remove the door lock through the service hole.

25. REMOVE REAR DOOR OUTSIDE HANDLE

Remove the 2 bolts and rear door outside handle.

26. REMOVE MULTIPLEX NETWORK DOOR COMPUTER**27. REMOVE REAR DOOR CLOSER RELAY**