

DTC	91, 92, 93	Acceleration Sensor Circuit
------------	-------------------	------------------------------------

CIRCUIT DESCRIPTION

See [page DI-87](#).

DTC No.	DTC Detecting Condition	Trouble Area
91 92 93	The acceleration sensor continues to detect vertical acceleration	<ul style="list-style-type: none"> • Right front, left front, rear acceleration sensor • Each acceleration sensor circuit • Suspension control ECU

- Code 91 corresponds to the right front acceleration sensor circuit.
- Code 92 corresponds to the left front acceleration sensor circuit.
- Code 93 corresponds to the rear acceleration sensor circuit.

WIRING DIAGRAM

See [page DI-87](#).

INSPECTION PROCEDURE

HINT:

- When DTC 91 is displayed, check right front acceleration sensor circuit.
- When DTC 92 is displayed, check left front acceleration sensor circuit.
- When DTC 93 is displayed, check rear acceleration sensor circuit.

See [page DI-87](#).