


## Door courtesy light and courtesy switch circuit

### CIRCUIT DESCRIPTION


The door courtesy switch goes on when the door is opened and goes off when door is closed.

### WIRING DIAGRAM

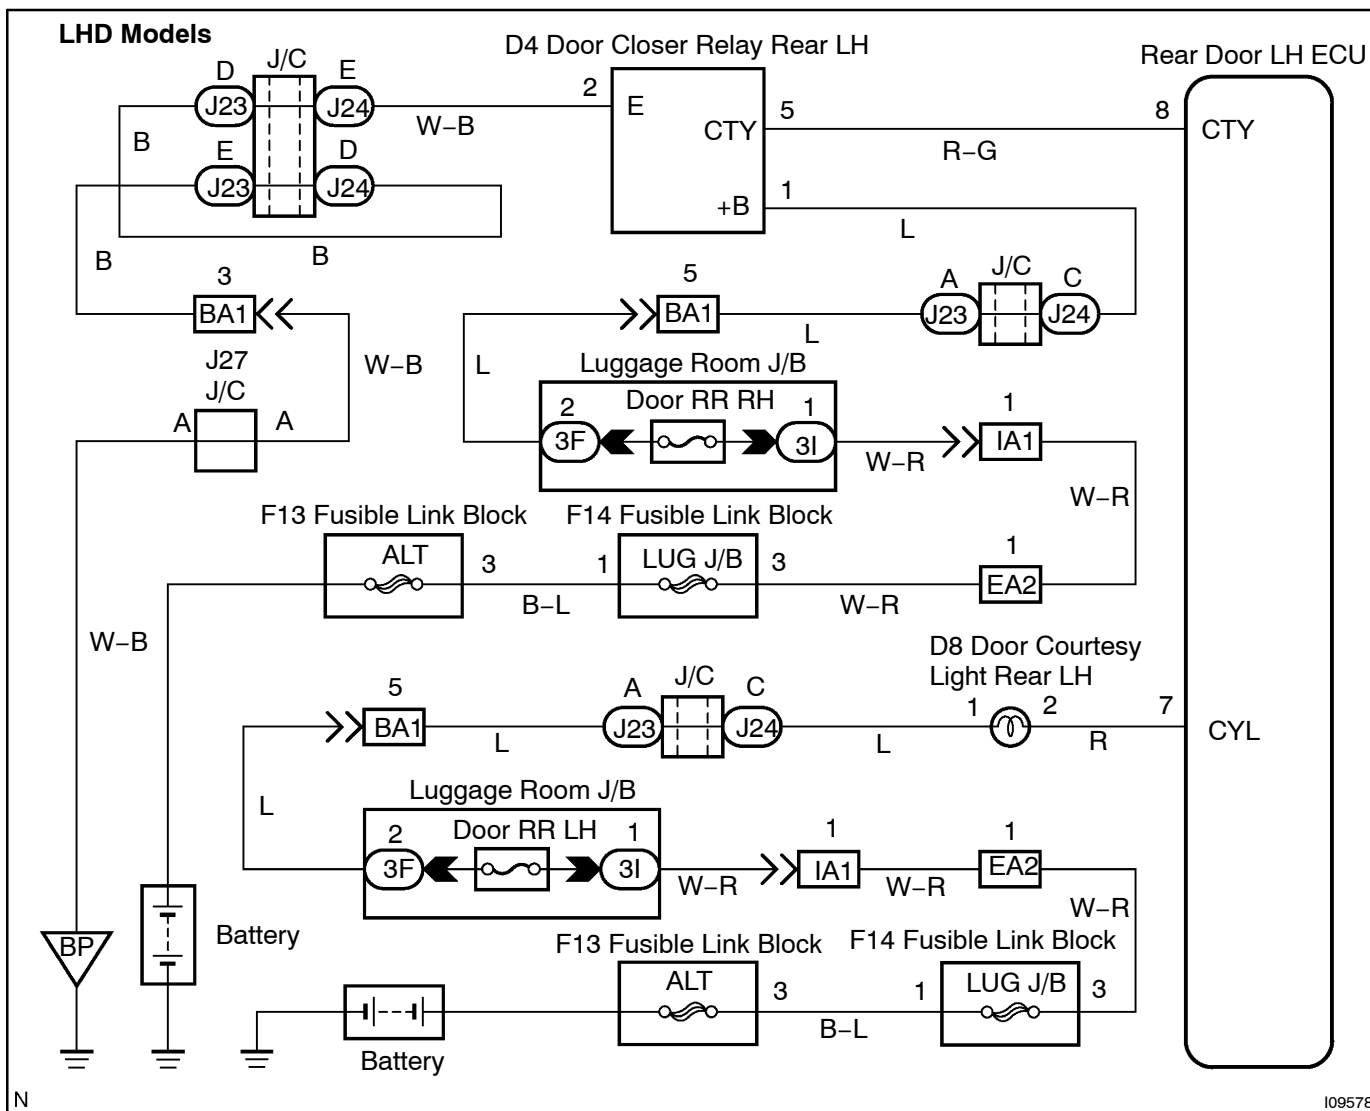

N

109578

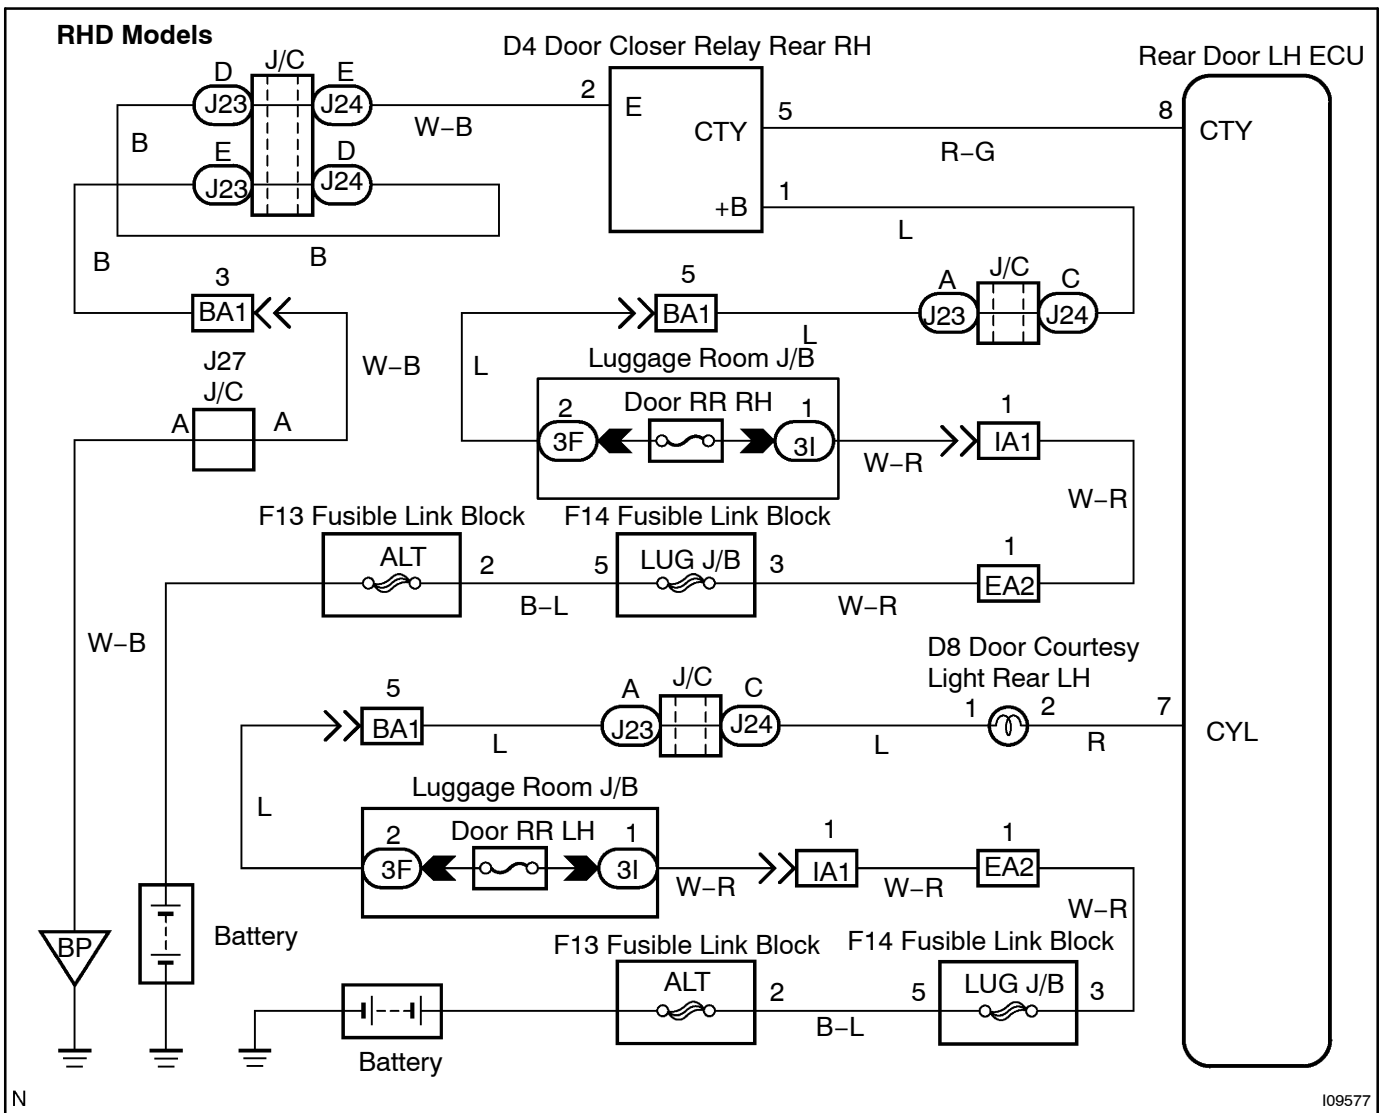

N

109577

## INSPECTION PROCEDURE

1 Check operation of door courtesy light.

**CHECK:**

Check that door courtesy light comes on when door opened, and goes off when door is closed.

**OK:**

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-614).

NG

2 Check courtesy light (See page BE-41).

NG

Replace the courtesy light.

OK

3 Check courtesy switch (See page BE-41).

NG

Replace the courtesy switch.

OK

4 Check wireharness and connector between courtesy light and rear left door ECU, courtesy switch and rear left door ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-614).