



INSPECTION

1. INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

- (a) Disconnect the oxygen sensor connectors.
- (b) Using an ohmmeter, measure the resistance between the terminals B and HT.

Resistance:

11 - 16 Ω at 20°C (68°F)

25 - 30 Ω at 300°C (1,472°F)

If the resistance is not as specified, replace the sensor.

- (c) Reconnect the oxygen sensor connectors.

2. INSPECT OPERATION OF HEATED OXYGEN SENSORS (See page DI-56)