



INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Pedal depressed)	-	No continuity
Switch pin pushed in (Pedal released)	1 - 2	Continuity
Switch pin free (Pedal depressed)	-	No continuity
Switch pin pushed in (Pedal released)	3 - 4	Continuity

If continuity is not as specified, replace the switch.