

## DISASSEMBLY

**At the time of disassembly, please pay attention to the following item.**

### REMOVE BUMPER MOULDING

- (a) Apply protective tape to the outside circumference of the moulding.
- (b) Disconnect engagement at the rear right and left of the moulding.
- (c) Gradually separate the adhesive from one side using a scraper to remove the bumper moulding.

HINT:

Tape the scraper tip before use.