

DTC	C1201 / 51	Engine Control System Malfunction
------------	-------------------	------------------------------------------

CIRCUIT DESCRIPTION

If any trouble occurs in the engine control system, the ECU prohibits BA & TRC & VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 / 51	The engine speed is 500 rpm or more and ENG malfunction signal continuously occurs for 5 sec. or more.	Engine control system

INSPECTION PROCEDURE

1	Check the DTC for the engine (See Pub. No. RM949E, page DI-4).
----------	-----------------------------------------------------------------------

*1

Repair engine control system according to the code output.

*2

Check for engine and ECT ECU connected to malfunction indicator light.

*1: Output NG code

*2: Malfunction indicator light remains ON