

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Security indicator is normal.	<ol style="list-style-type: none"> 1. Security indicator circuit 2. Wire harness and connector 3. Transponder key ECU 	DI-442 IN-30 IN-30
No code is output.	<ol style="list-style-type: none"> 1. Diagnosis circuit 2. Power source circuit 3. Wire harness and connector 4. Transponder key ECU 	DI-444 DI-436 IN-30 IN-30
Engine immobiliser is not set. (Engine starts with key codes other than the registered key code.)	<ol style="list-style-type: none"> 1. Engine and ECU ECT circuit 2. Wire harness and connector 3. Engine system 4. Transponder key ECU 	DI-448 IN-30 - IN-30