


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the side airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

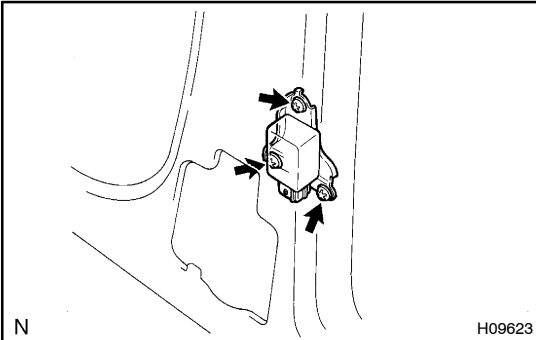

1. INSTALL SIDE AIRBAG SENSOR ASSEMBLY

- (a) Using a Torx wrench, install the side airbag sensor assembly with the 3 screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the side airbag sensor assembly connector.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed. Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

2. INSTALL RETRACTOR PART OF FRONT SEAT OUTER BELT (See page BO-155)

- (a) Install the retractor with the 2 bolts.

Torque:

Upper bolt: 7.5 N·m (76 kgf·cm, 66 in·lbf)

Lower bolt: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (b) Connect the pretensioner connector.

3. INSTALL CENTER PILLAR LOWER GARNISH

4. INSTALL FRONT DOOR SCUFF PLATE

5. INSTALL REAR DOOR SCUFF PLATE