


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

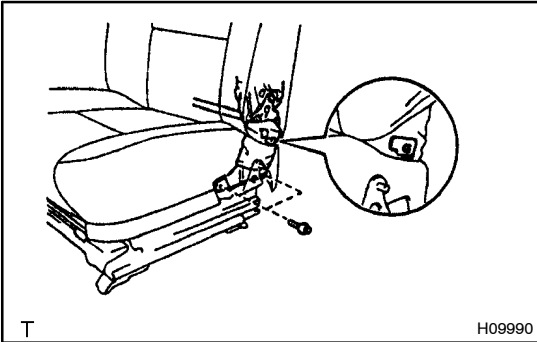

1. INSTALL FRONT SEATBACK ASSEMBLY


- (a) Install the seatback assembly with the 4 bolts.

Torque:

Front side bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Rear side bolt: 7.5 N·m (76 kgf·cm, 66 in·lbf)

- (b) Engage the hook of the seat cushion cover.

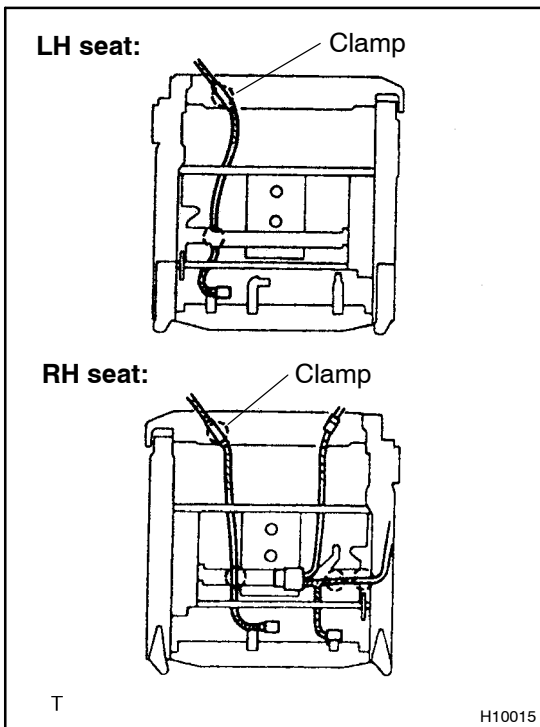


- (c) Attach the wiring harness clamp for the front side airbag to the seat cushion frame.

- (d) Attach the wiring harness clamp for the front side airbag to the bracket.


NOTICE:

When handling the airbag wire harness, take care not to damage the airbag wire harness.

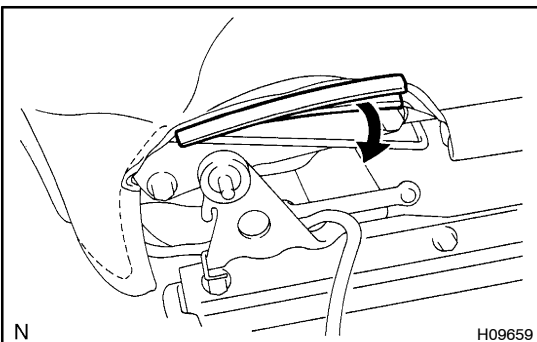


2. INSTALL FRONT SEAT INNER BELT

- (a) Engage the hook of the seat cushion cover.

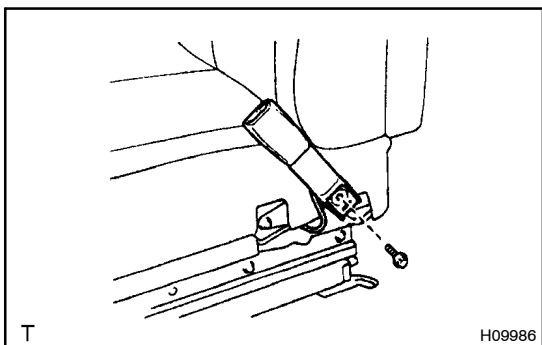

- (b) Driver's seat:
Connect the connector of the front seat inner belt.
- (c) Install the front seat inner belt with the bolt.
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

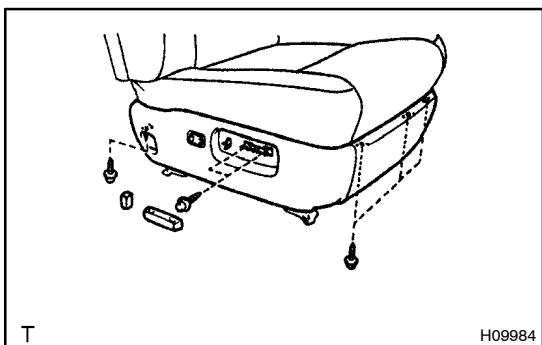

3. INSTALL FRONT SEAT CUSHION SHIELD

- (a) Driver's seat:
Connect the connector of the lumbar support switch.
- (b) Install the front seat cushion shield with the 6 screws.
- (c) Install the power seat switch knobs.

4. INSTALL HEADREST

5. INSTALL FRONT SEAT

- (a) Mount the front seat to the vehicle.

NOTICE:

Be careful not to damage the body.

- (b) Connect the connectors.
- (c) Slide the front seat to the rearmost position.
- (d) Tighten the bolts on the front side temporarily, from the bolt on the outer side tighten them completely.
Torque: 61 N·m (620 kgf·cm, 45 ft·lbf)
- (e) Slide the front seat to the most front position.
- (f) Tighten the bolts on the rear side temporarily, from the bolt on the outer side tighten them completely.
Torque: 61 N·m (620 kgf·cm, 45 ft·lbf)
- (g) Install the front seat track covers.
- (h) Install the front seat outer belt anchor to the front seat and tighten the bolt.
Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)
- (i) Install the seat belt anchor cover cap.

