


Power outlet circuit

WIRING DIAGRAM

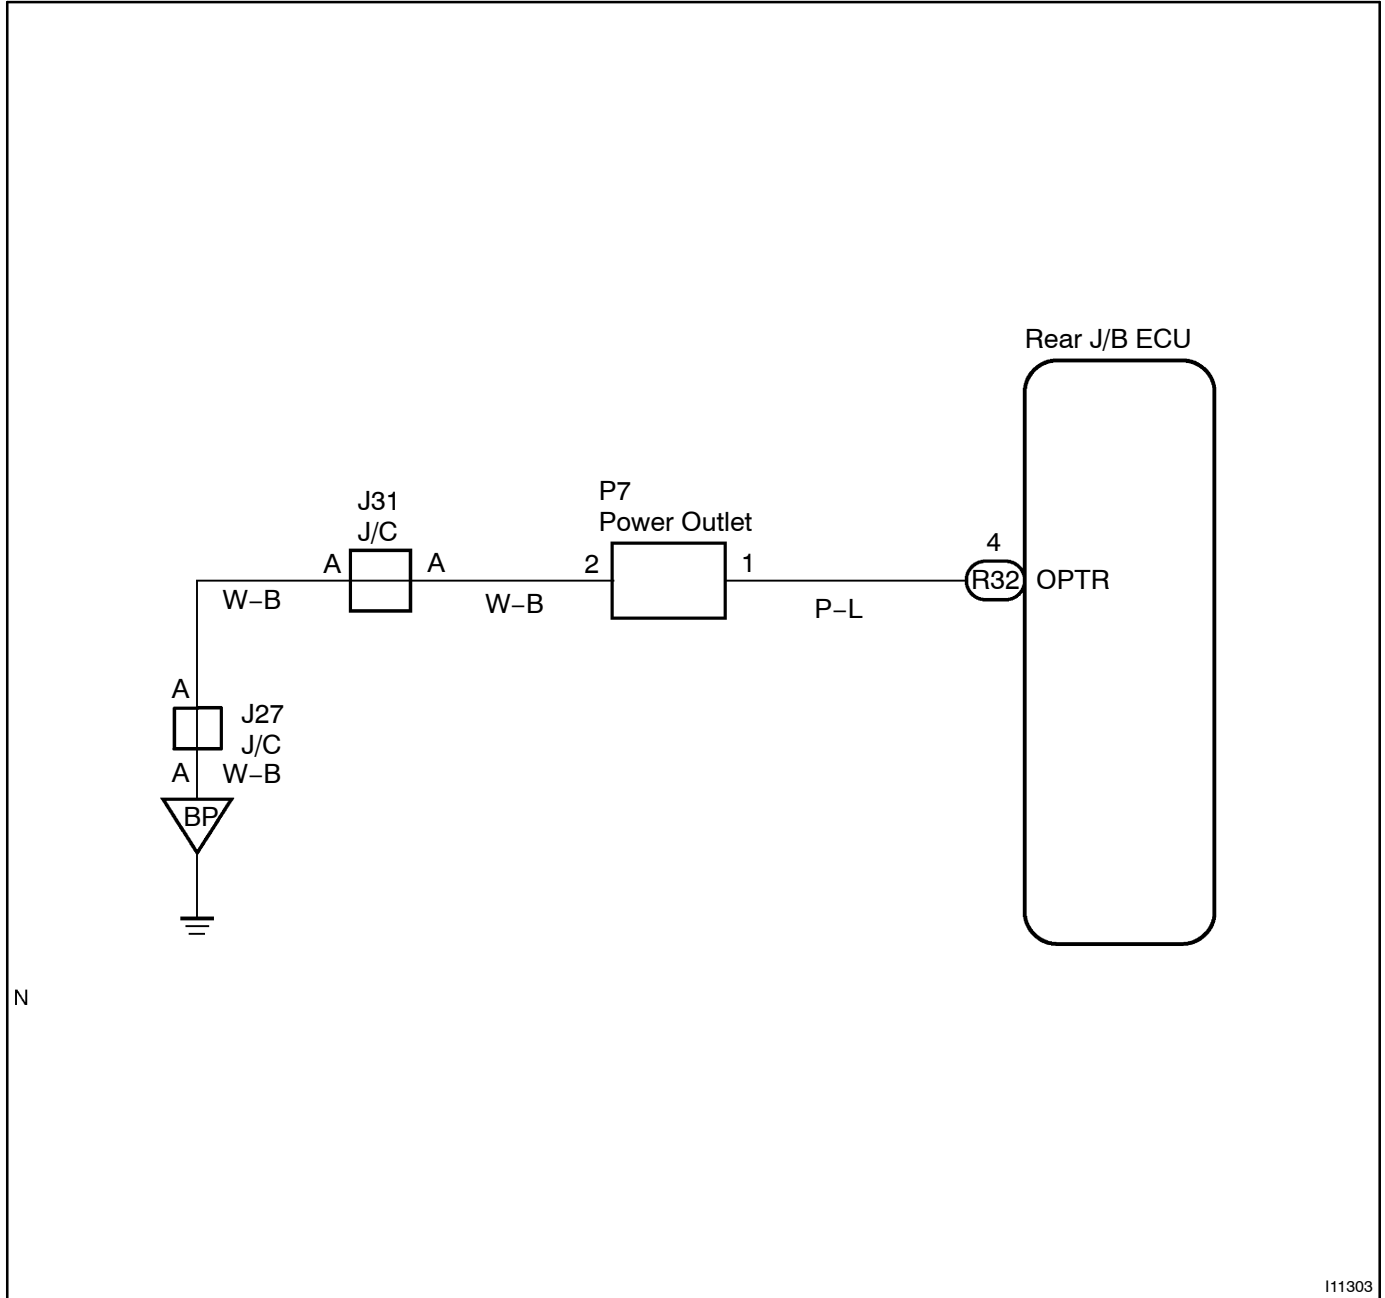

INSPECTION PROCEDURE

1 Check power outlet.

NG

Replace the luggage opener motor.

OK

2 Check wireharness and connector between power outlet and rear J/B ECU
(See page N-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
(See page DI-665).