


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
ACC	3 - 4	Continuity
ON	2 - 3 - 4 6 - 11	Continuity
START	1 - 2 - 4 5 - 6 - 11	Continuity

If continuity is not as specified, replace the switch.

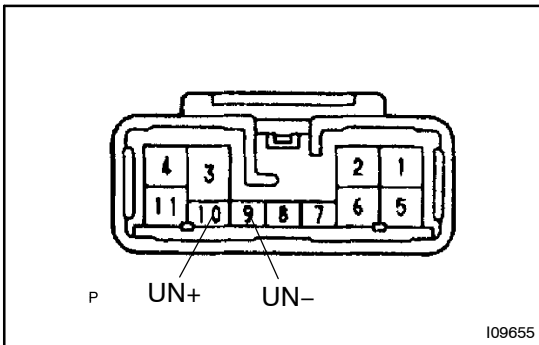

2. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Key removed)	-	No continuity
ON (Key set)	9 - 10	Continuity

If continuity is not as specified, replace the switch.