

## DISASSEMBLY

### NOTICE:

When using a vise, do not overtighten it.

#### 1. REMOVE TRANSPONDER KEY COIL AND KEY CYLINDER LAMP ASSEMBLY

Remove the screw, transponder key coil and key cylinder lamp assembly.

#### 2. REMOVE WIRING HARNESS PROTECTOR COVER

Loosen the clamp and remove the wiring harness protector cover.

#### 3. REMOVE NO. 1 STEERING LOWER TUBE BRACKET


Remove the bolt and No. 1 steering lower tube bracket.

#### 4. REMOVE TILT POSITION SENSOR

Remove the bolt and tilt position sensor.

#### 5. REMOVE TELESCOPIC POSITION SENSOR

Remove the 2 bolts and telescopic position sensor.

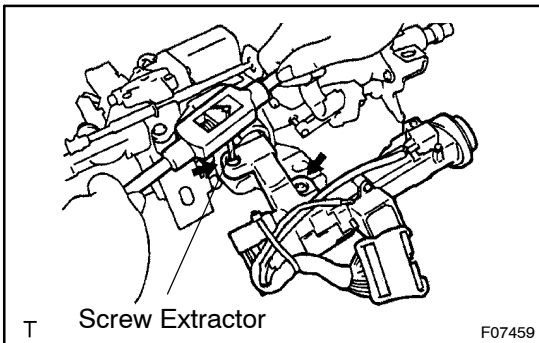

#### 6. REMOVE COLUMN UPPER BRACKET

- Using a centering punch, mark the center of the 2 tapered-head bolts.
- Using a 3 – 4 mm (0.12 – 0.16 in.) drill, drill into the 2 tapered-head bolts.
- Using a screw extractor, remove 2 tapered-head bolts and column upper bracket.