


AIR OUTLET SERVOMOTOR INSPECTION

1. Driver side:

REMOVE AIR OUTLET SERVOMOTOR

- (a) Remove the instrument panel (See page BO-96).
- (b) Disconnect the connector.

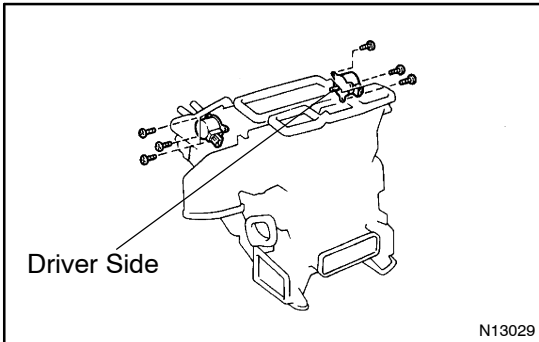

- (c) Remove the 3 screws and the servomotor.


HINT:

Be careful not to pull out the pulley, when removing servomotor.

2. Passenger side:

REMOVE AIR OUTLET SERVOMOTOR

- (a) Remove the instrument panel (See page BO-96).
- (b) Remove the blower unit (See page AC-43).
- (c) Disconnect the connector.

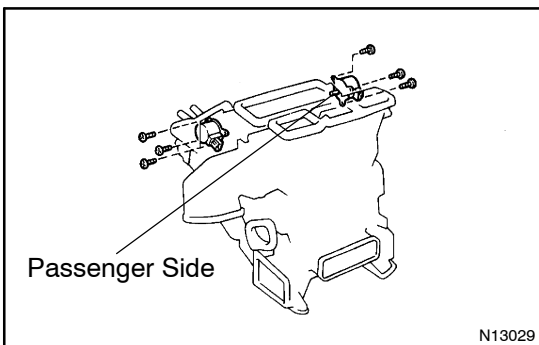


- (d) Remove the 3 screws and the servomotor.

HINT:

Be careful not to pull out the pulley.

3. INSPECT AIR OUTLET SERVOMOTOR CIRCUIT (See page DI-798)

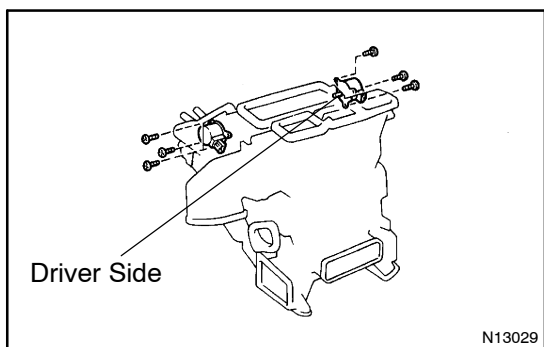


**4. Driver side:
INSTALL AIR OUTLET SERVOMOTOR**

- (a) Install the servomotor with the 3 screws.

(b) Connect the connector.

(c) Install the instrument panel (See page BO-105).

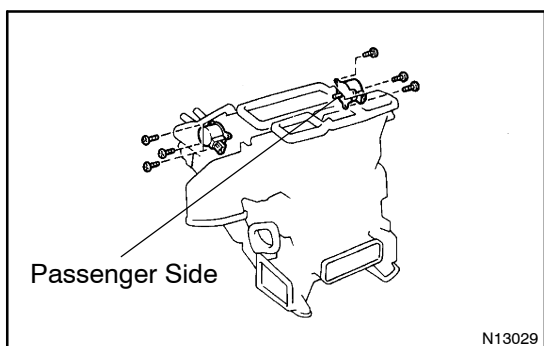

**5. Passenger side:
INSTALL AIR OUTLET SERVOMOTOR**

- (a) Install the servomotor with the 3 screws.

(b) Connect the connector.

(c) Install the blower unit (See page AC-47)

(d) Install the instrument panel (See page BO-105).