

INSTALLATION

1. INSTALL FAN ASSEMBLY WITH HYDRAULIC MOTOR

Install the fan assembly with motor and 4 bolts.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

2. INSTALL RADIATOR ASSEMBLY

(a) Install the 2 grommets to the radiator.

(b) Place the radiator assembly on the body bracket.


(c) Install the 2 radiator supports and 2 nuts.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

3. CONNECT WATER TEMPERATURE SENSOR CONNECTOR

4. CONNECT HYDRAULIC MOTOR RESERVOIR

Connect the reservoir and install the bolt to the radiator assembly.

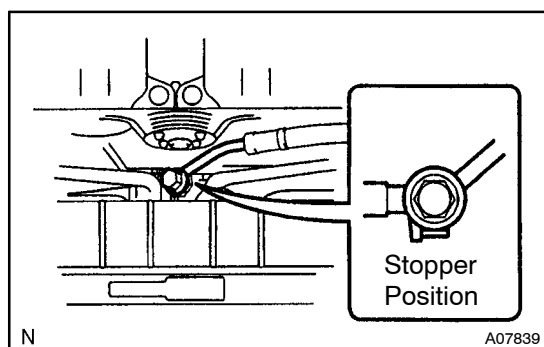

5. CONNECT HOSES

(a) Install a new gasket to the pressure hose and connect the pressure hose to the hydraulic motor with the union bolt.

Torque: 64 N·m (650 kgf·cm, 46 ft·lbf)

(b) Connect the hydraulic motor return hose to the hydraulic motor and 2 hose clamps.

(c) Connect the 2 A/T oil cooler hoses to the radiator.

(d) Connect the radiator reservoir hose.

(e) Connect the upper and lower radiator hose to the radiator.

6. FILL ENGINE COOLANT (See page CO-2)

7. BLEED ELECTRONICALLY CONTROLLED HYDRAULIC COOLING FAN SYSTEM (See page CO-20)

8. INSTALL AIR CLEANER INLET NO.1

9. INSTALL ENGINE UNDER COVER