


Ts Terminal Of DLC3 Circuit

CIRCUIT DESCRIPTION


By connecting terminals Ts and CG of the DLC3, the vehicle height control is not carried out.

WIRING DIAGRAM

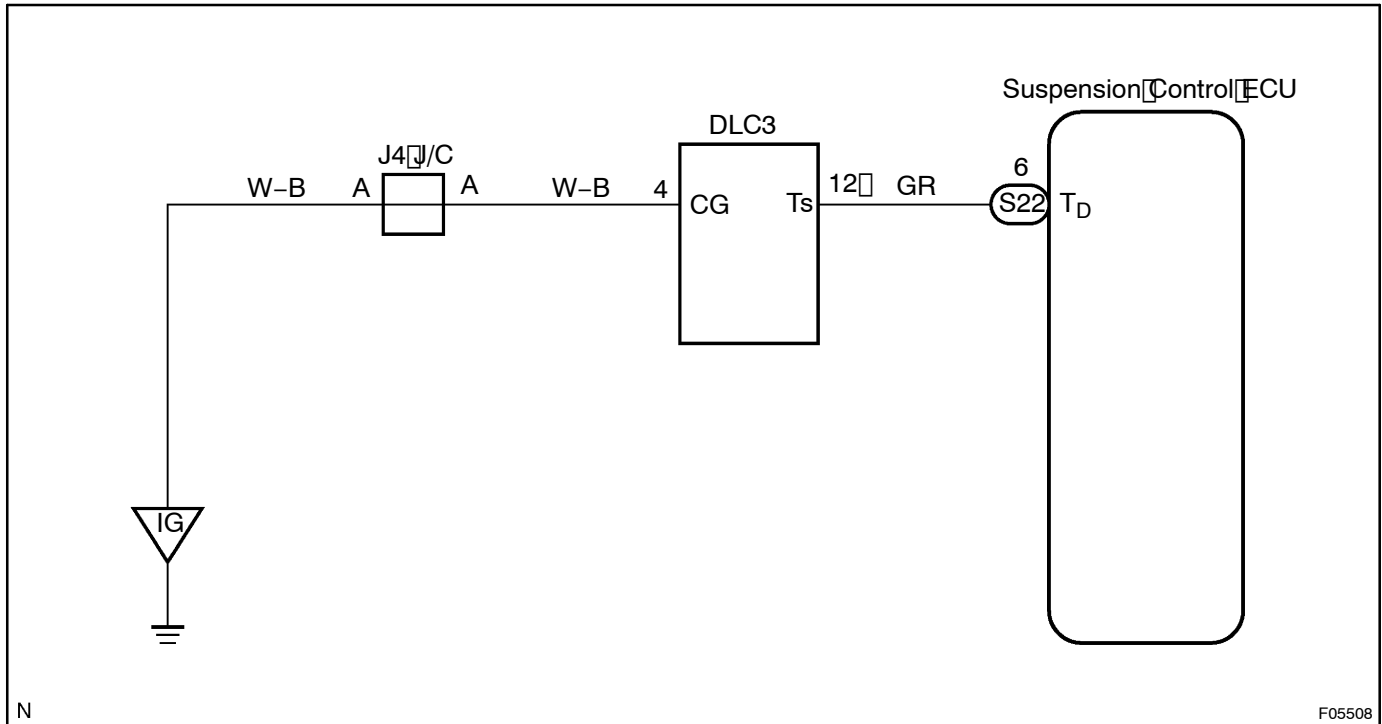

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and CG of DLC3.

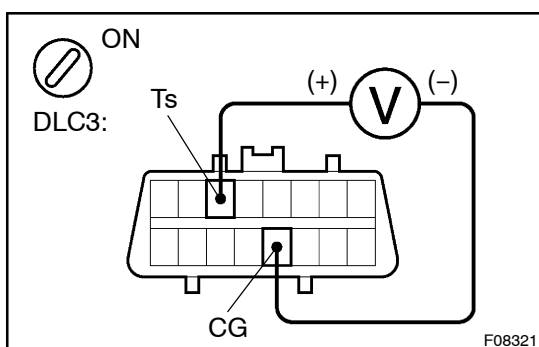

CHECK:

- Turn the ignition switch ON.
- Measure the voltage between terminals Ts and CG of the DLC3.

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-79).

NG

2 Check for open and short circuit in harness and connector between terminal CG of DLC3 and body ground (See page IN-30).

NG

Repair or replace harness or connector.

OK

3 Check for open and short circuit in harness and connector between suspension control ECU and DLC3 (See page IN-30).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.