

## REMOVAL


### 1. REMOVE STABILIZER BAR LINKS

- (a) Remove the 2 nuts and stabilizer bar link.

HINT:

If the ball joint turns together with the nut, use a 6 mm hexagon wrench to hold the stud.

- (b) Employ the same manner described above to the other side.

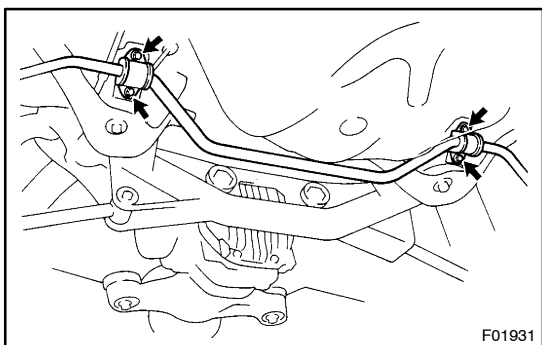

### 2. REMOVE STABILIZER BAR

Remove the 4 bolts, right and left stabilizer bar brackets and stabilizer bar.

### 3. REMOVE 2 BUSHINGS