


N13503

ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Using SST, loosen the body side hinge bolts to adjust.

Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)

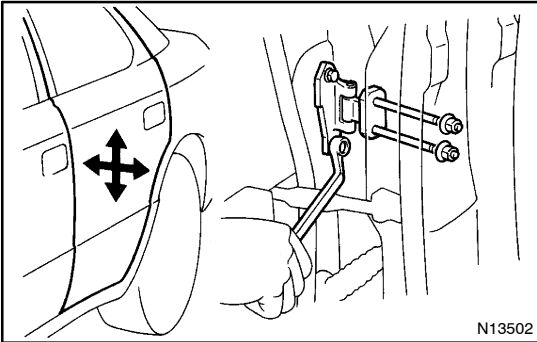

N13502


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

HINT:

Substitute the bolt with a washer for the centering bolt (See page BO-15).

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

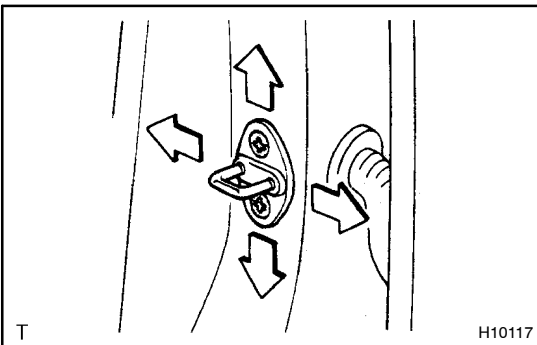

H10117

1. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Loosen the striker mounting screws.

Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

(c) Using a plastic hammer, tap the striker to adjust it.


2. ADJUST DETECTION SWITCH

(a) Connect the multiplex network switch assembly to the wiring harness and turn the ignition switch to ON.

(b) Close the door glass to the fully closed position.

HINT:

Manually close the door glass.

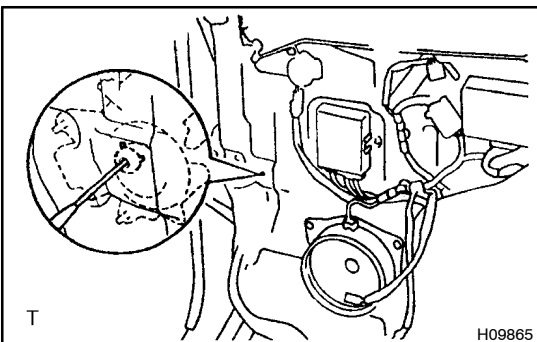

H09865

(c) Fully open the door glass by the master switch while pressing the reset switch at 30 – 50 N (3 – 5 kgf) using a 2 mm-dia. round bar.

NOTICE:

- If a wire is used, the tip must be flat.
 - Manually open the door all the way.
 - Be careful so as not to damage the rubber part of the reset switch.
- (d) Release the round bar from the reset switch and fully close the door glass.

HINT:

Manually close the door glass.

- (e) Check the door glass can be fully open or closed by automatic operations.
- (f) Carry out the power window function check.