


# G ELECTRICAL WIRING ROUTING

## Position of Parts in Engine Compartment

[RHD]

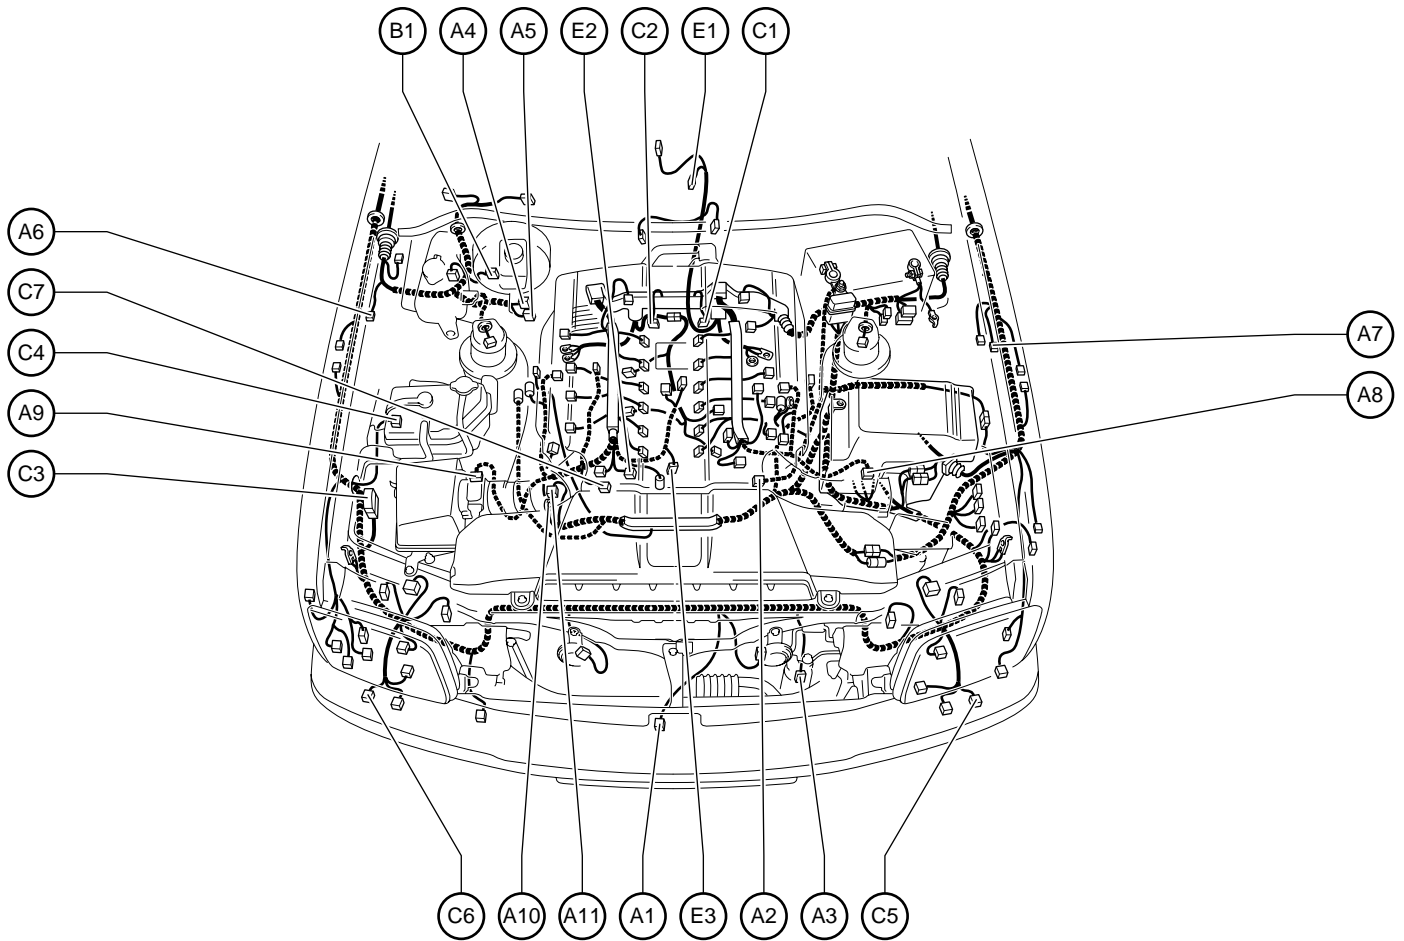

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Pressure Sensor
- A 4 ABS and Traction Actuator
- A 5 ABS and Traction Actuator
- A 6 ABS Speed Sensor and Pad Wear Indicator Front RH
- A 7 ABS Speed Sensor Front LH
- A 8 Air Flow Meter (Left Bank Control)
- A 9 Air Flow Meter (Right Bank Control)
- A10 Alternator
- A11 Alternator

- B 1 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor (Left Bank Control)
- C 2 Camshaft Position Sensor (Right Bank Control)
- C 3 Check Connector
- C 4 Coolant Level SW
- C 5 Cornering Light LH
- C 6 Cornering Light RH
- C 7 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor (Left Bank Control)
- E 3 EFI Water Temp. Sensor (Right Bank Control)