


Tc Terminal Circuit

CIRCUIT DESCRIPTION

Connecting between terminals Tc and E₁ of the check connector or Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

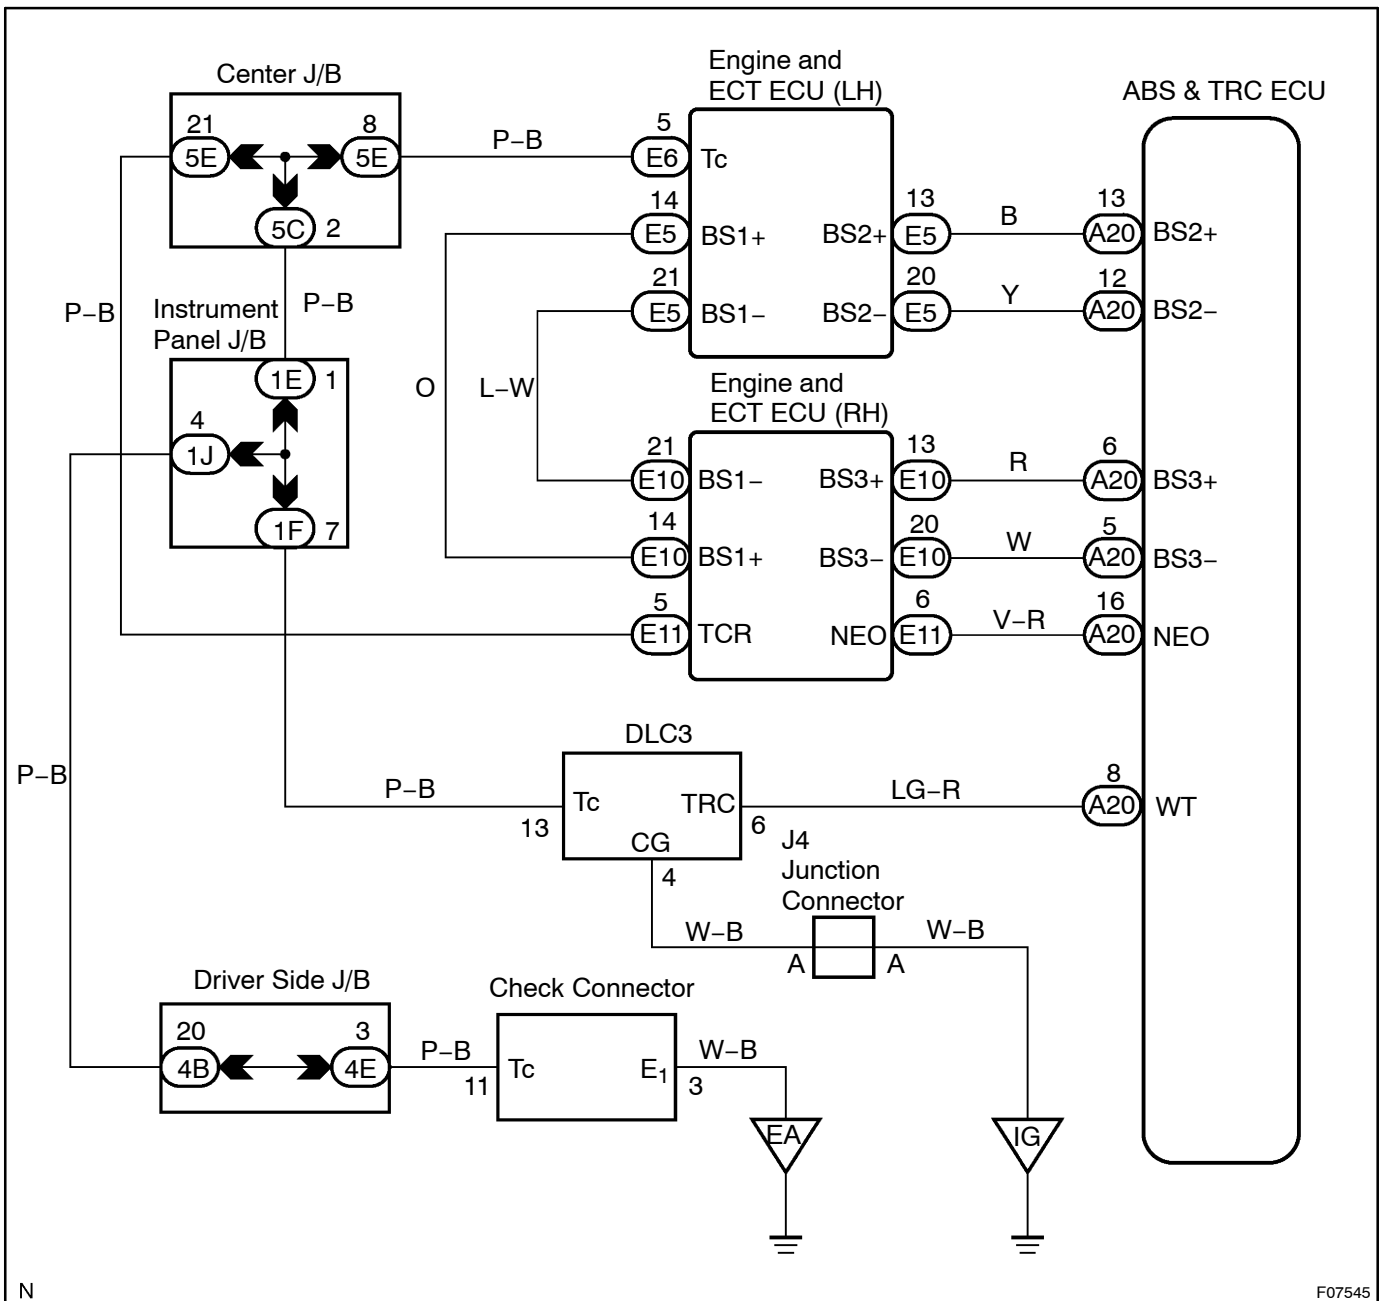


N

F07545

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of check connector or Tc and CG of DLC3.

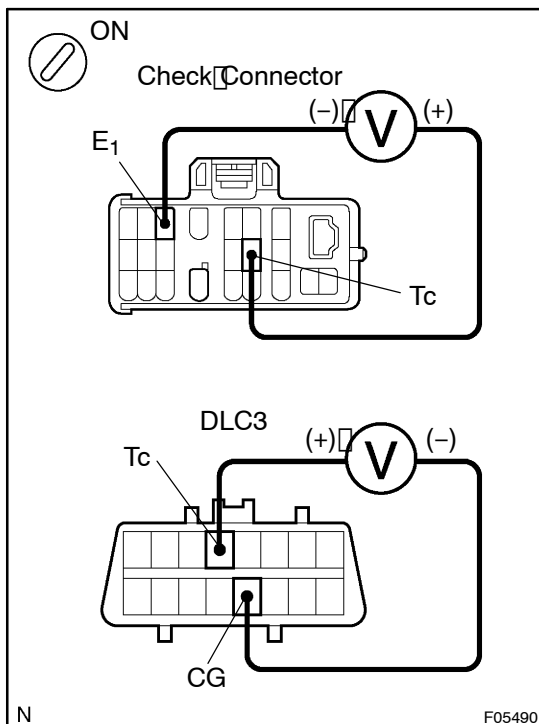**CHECK:**

- (a) Turn the ignition switch ON.
 (b) Measure voltage between terminals Tc and E₁ of the check connector or Tc and CG of the DLC3.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Tc and E₁ or Tc and CG are connected, the ABS & TRC ECU may be defective.

NG

- 2 Check for open and short circuit in harness and connector between ABS & TRC ECU and check connector or DLC3, check connector or DLC3 and body ground (See page N-30).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & TRC ECU.