

REMOVAL

1. REMOVE MASTER CYLINDER (See page BR-16)

2. DISCONNECT BRAKE LINE

Using SST, disconnect the 6 brake lines from the brake actuator.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

3. REMOVE BRAKE ACTUATOR ASSEMBLY

- (a) Disconnect the 2 connectors from the brake actuator.
- (b) Remove the bolt, 2 nuts and brake actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

4. REMOVE BRAKE ACTUATOR

- (a) Remove the 2 nuts and actuator from the actuator bracket.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Remove the 2 cushion bolts and 3 cushions from the brake actuator.