


CIRCUIT INSPECTION

Power source circuit


CIRCUIT DESCRIPTION

This circuit provides power to operate the rear right door ECU.

WIRING DIAGRAM

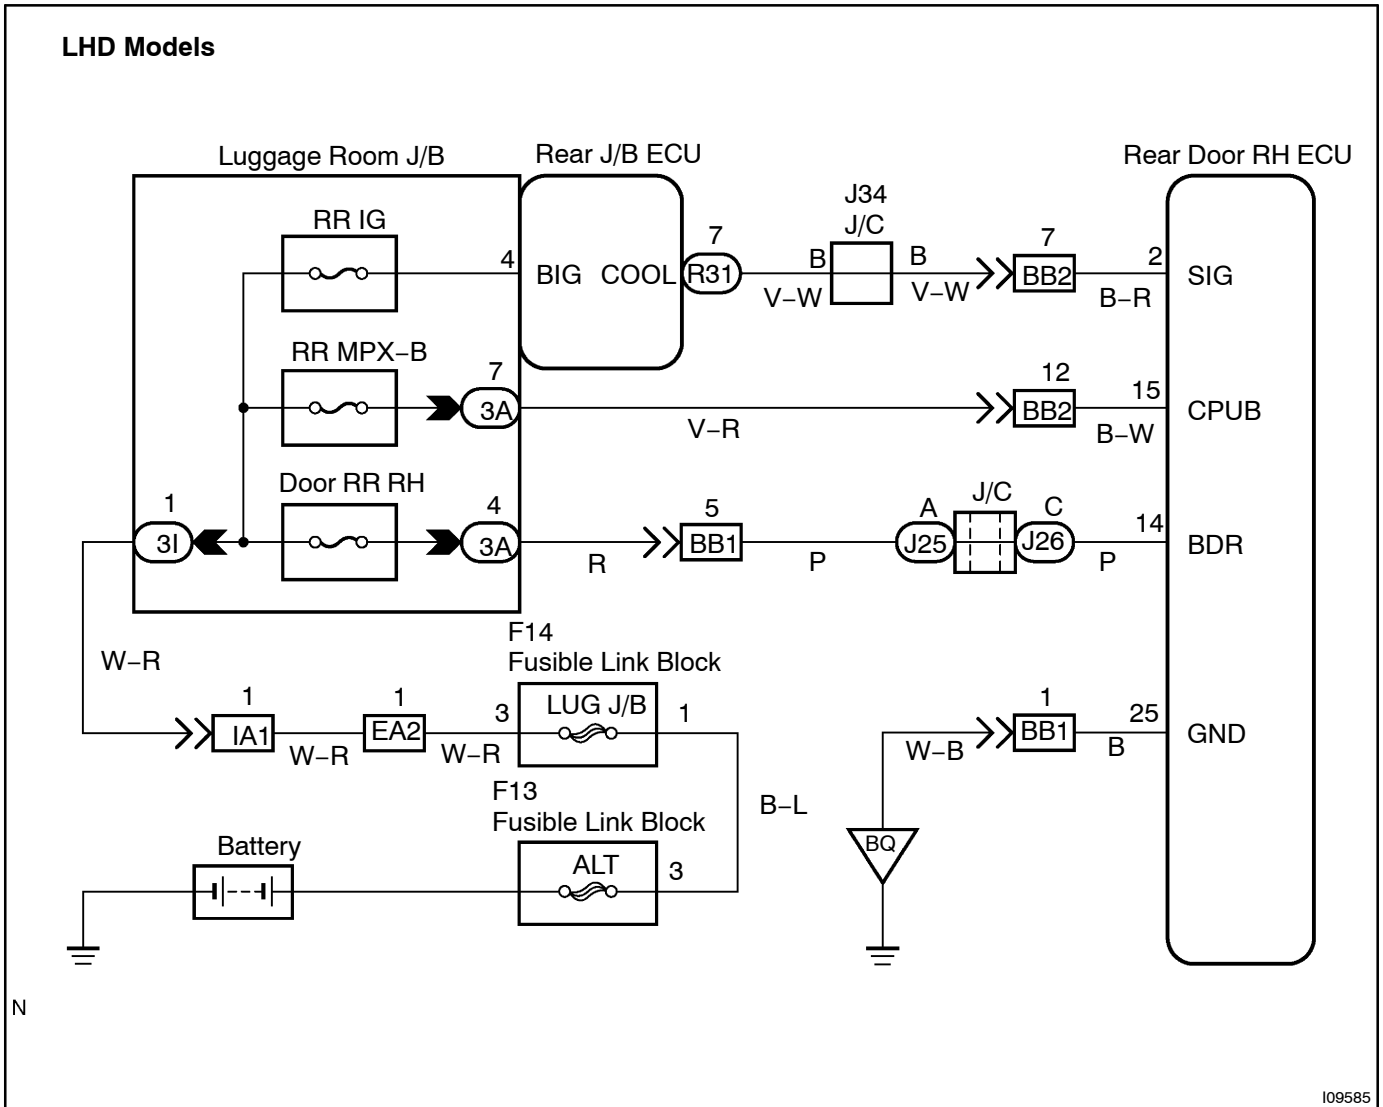

RHD Models

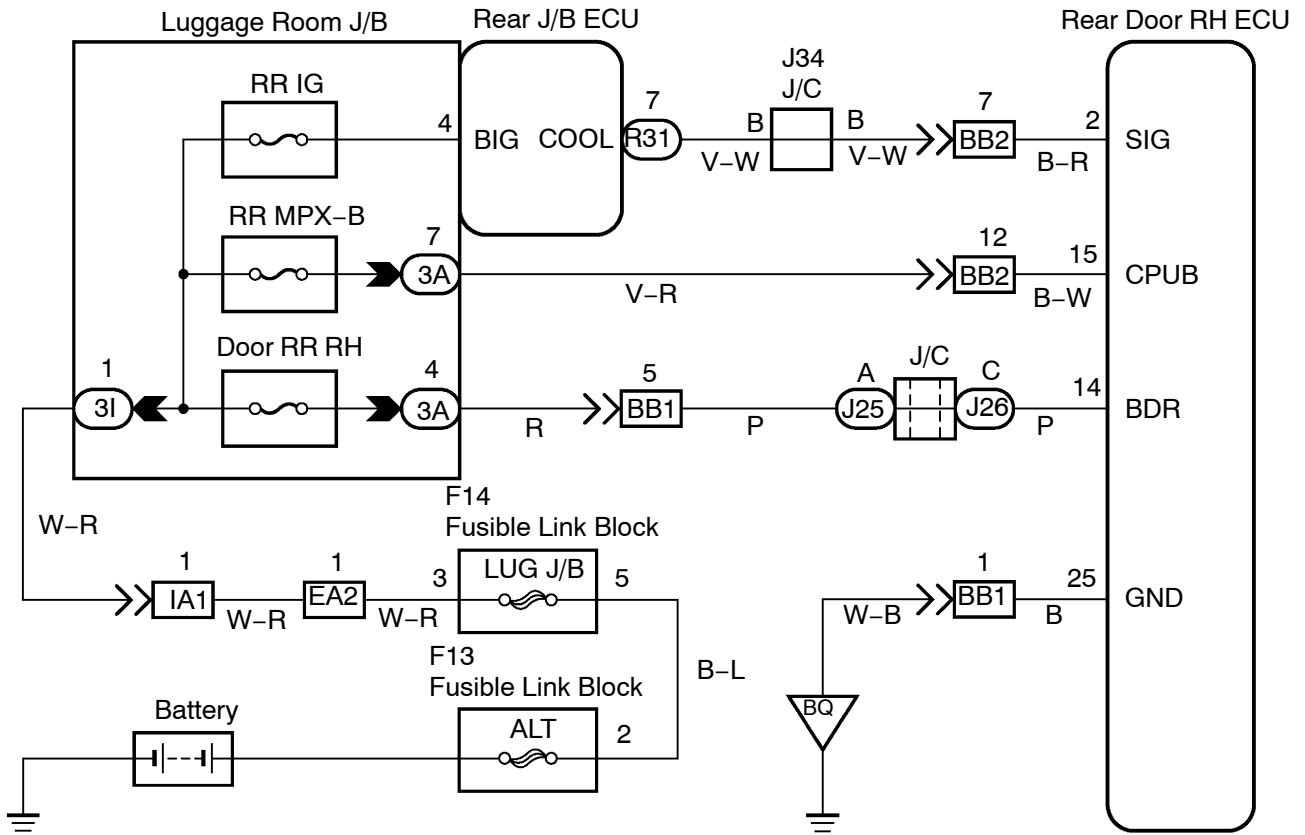

N

109586

INSPECTION PROCEDURE

1	Check RR MPXB, RR IG and DOOR(RR RH) fuse.
----------	---

CHECK:

Check continuity of RR MPXB, RR IG and DOOR(RR RH) fuse.

OK:

Continuity



2	Check voltage between terminals BDR,CPUB, SIG and GND of rear right door ECU connector.
----------	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

 
 
- (a) Turn ignition switch OFF.
- (b) Disconnect the rear right door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:

Voltage: 10 – 14V



3 Check wireharness and connector between ECU and body ground (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between ECU and battery (See page IN-30).