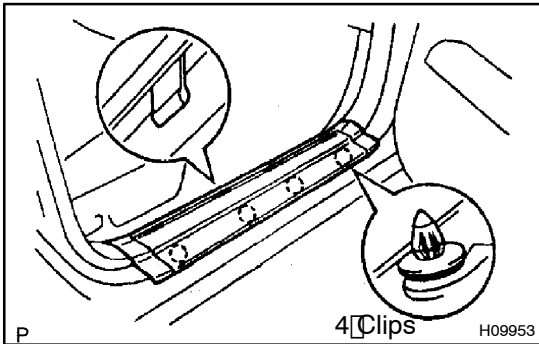


REMOVAL

1. REMOVE FRONT SEAT (See page BO-120)
2. REMOVE REAR SEAT (See page BO-139)



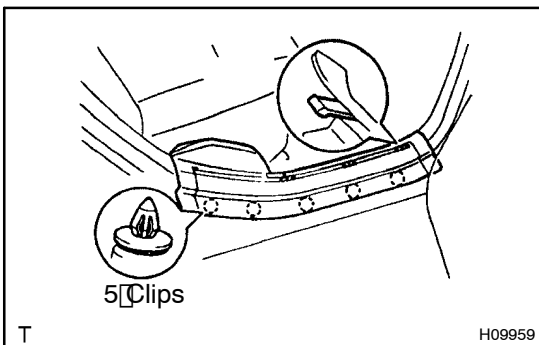
3. REMOVE FRONT DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.



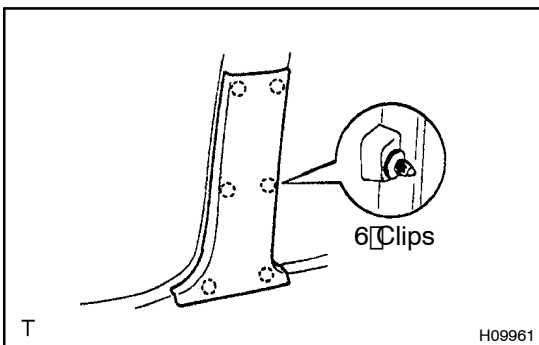
4. REMOVE REAR DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the rear door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

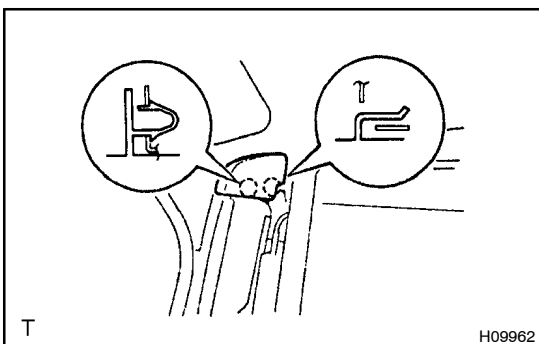


5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIPS

6. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIPS

7. REMOVE CENTER PILLAR LOWER GARNISH PANEL

- (a) Remove the center pillar lower garnish panel.
- (b) Employ the same manner described above to the other side.



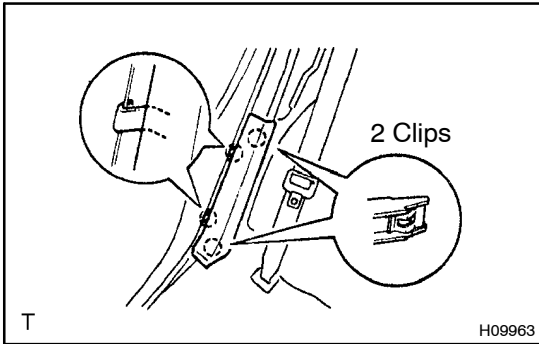
8. REMOVE REAR SEATBACK STAY COVER

- (a) Using a screwdriver, remove the rear seatback stay cover.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

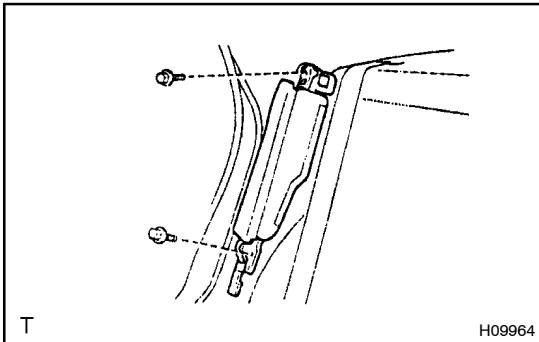
**9. REMOVE REAR SIDE SEATBACK ASSEMBLY**

- (a) Using a screwdriver, remove the rear side seatback assembly.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

**10. REMOVE REAR SEAT SIDE AIRBAG**

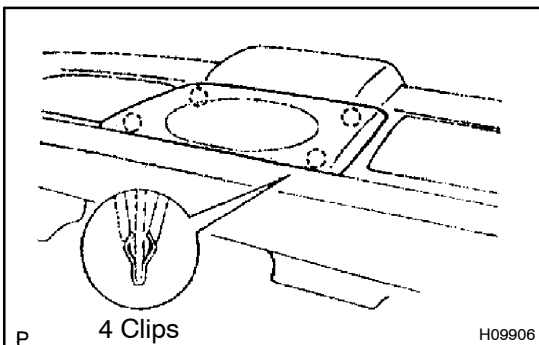
- (a) Disconnect the connector.
 (b) Remove the 2 bolts, nut and rear seat side airbag.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

CAUTION:

- Do not store the rear side airbag assembly with the airbag deployment direction facing down.
- Never disassemble the rear side airbag assembly.

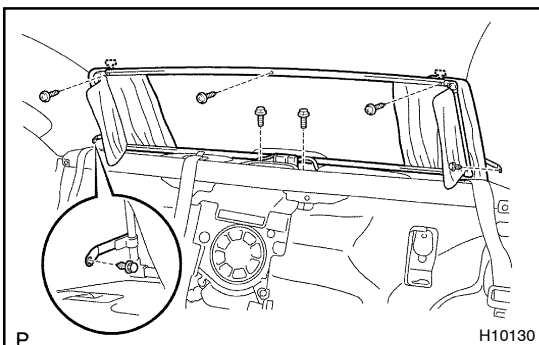
- (c) Employ the same manner described above to the other side.

**11. w/ Back window curtain:****REMOVE SPEAKER GRILLE**

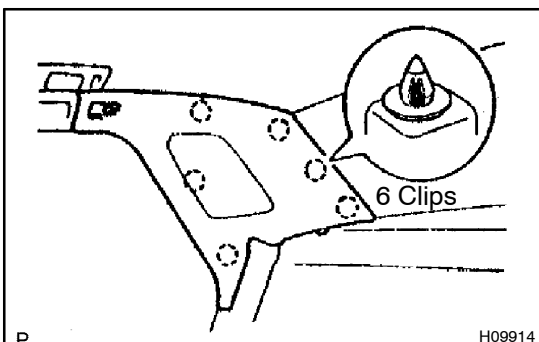
Using a screwdriver, remove the speaker grille.

HINT:

Tape the screwdriver tip before use.

**12. w/ Back window curtain:****REMOVE POWER CURTAIN ASSEMBLY**

- (a) Disconnect the connector.
 (b) Remove the 2 bolts, 3 screws, 2 clips and power curtain assembly.

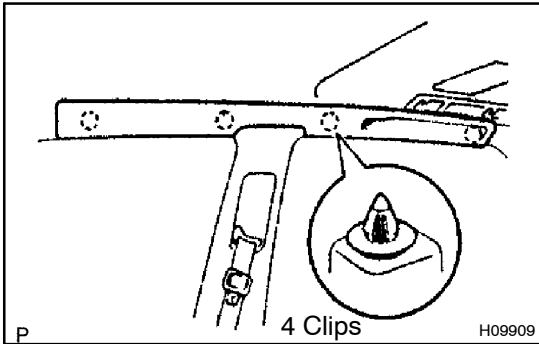
13. REMOVE ASSIST GRIPS**14. REMOVE ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, remove the roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

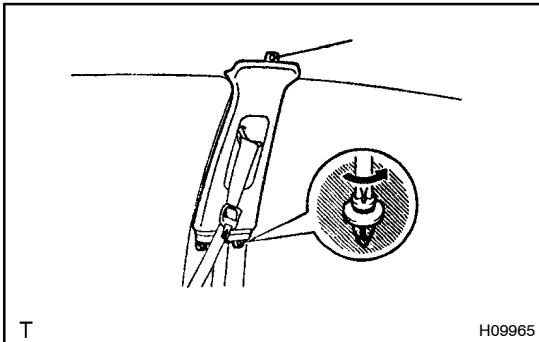
**15. REMOVE ROOF SIDE RAIL GARNISH**

- (a) Using a screwdriver, remove the roof side rail garnish.

HINT:

Tape the screwdriver tip before use.

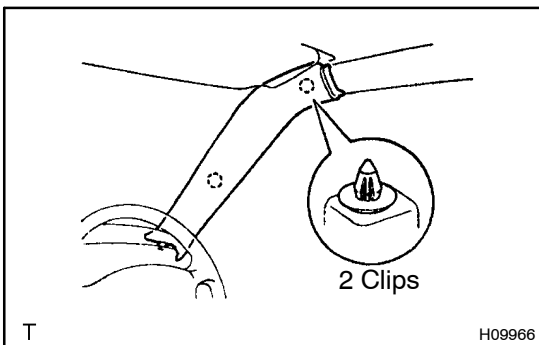
- (b) Employ the same manner described above to the other side.

**16. REMOVE CENTER PILLAR UPPER GARNISH PANEL**

- (a) Remove the 3 clips.

- (b) Remove the center pillar upper garnish panel.

- (c) Employ the same manner described above to the other side.

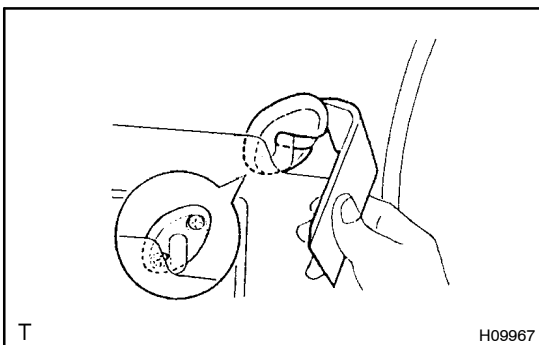
**17. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

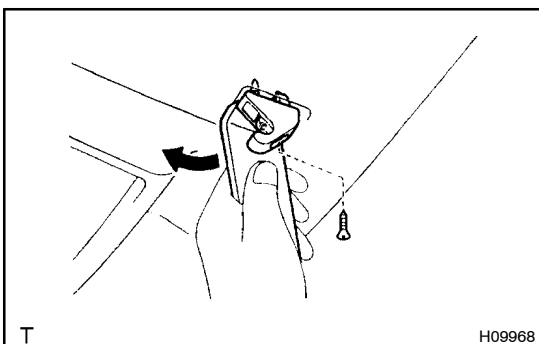
- (b) Employ the same manner described above to the other side.

**18. REMOVE SUN VISOR**

- (a) Using a moulding remover, remove the visor arm case.

- (b) Remove the 2 screws and sun visor.

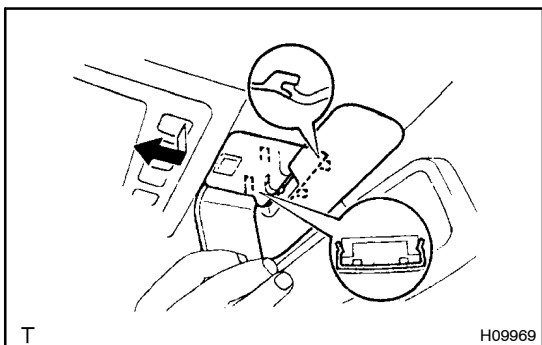
- (c) Employ the same manner described above to the other side.

**19. REMOVE VISOR HOLDER**

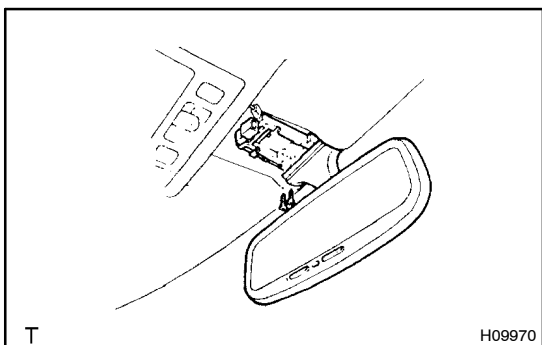
- (a) Remove the screw.

- (b) Using a moulding remover, remove the visor holder.

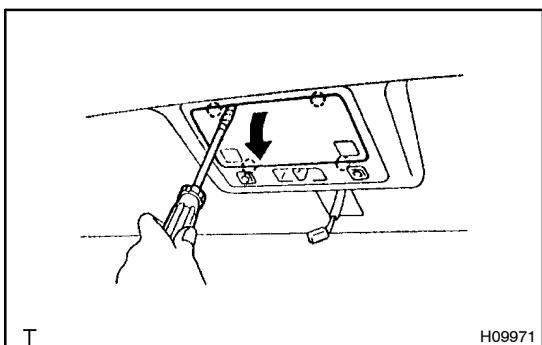
- (c) Employ the same manner described above to the other side.

**20. REMOVE CENTER VISOR ASSEMBLY**

Using a moulding remover, remove the center visor assembly as shown in the illustration.

**21. REMOVE INNER REAR VIEW MIRROR**

Remove the 2 screws and inner rear view mirror, then disconnect the connector.

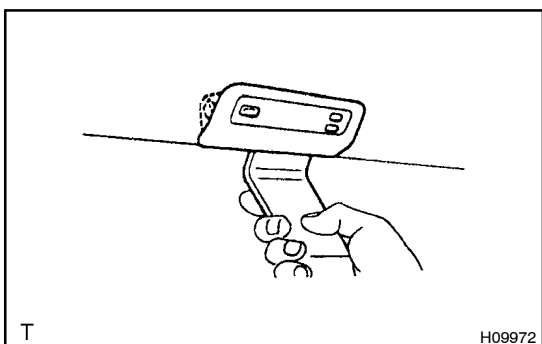
**22. REMOVE MAP LIGHT ASSEMBLY**

(a) Using a screwdriver, remove the map light lens.

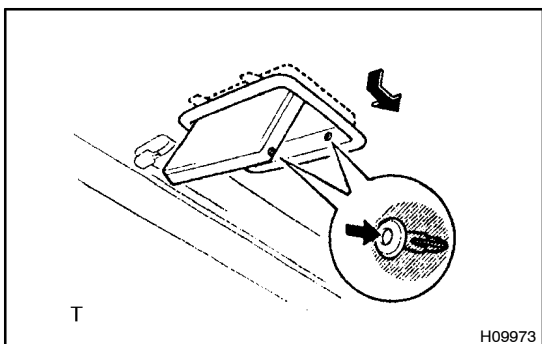
HINT:

Tape the screwdriver tip before use.

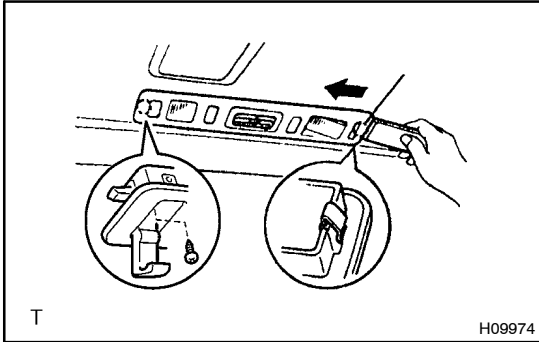
(b) Remove the 2 screws and map light assembly, then disconnect the connector.

**23. REMOVE REAR CLOCK**

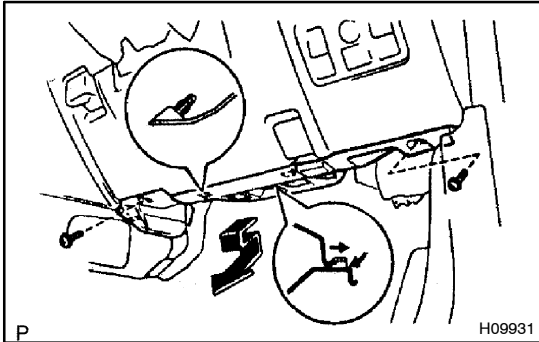
Using a moulding remover, remove the rear clock, then disconnect the connector.

**24. REMOVE ROOM LIGHT NO.1 ASSEMBLY**

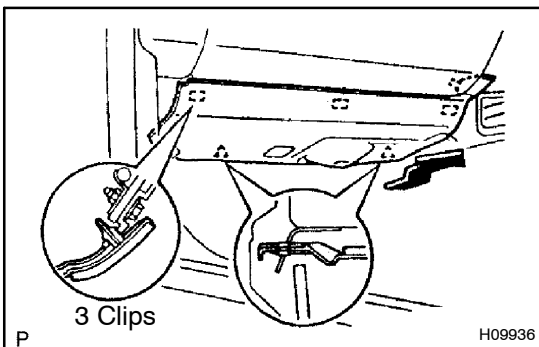
Remove the 2 clips and room light No.1 assembly, then disconnect the connector.

**25. REMOVE REAR ROOM LIGHT ASSEMBLY**

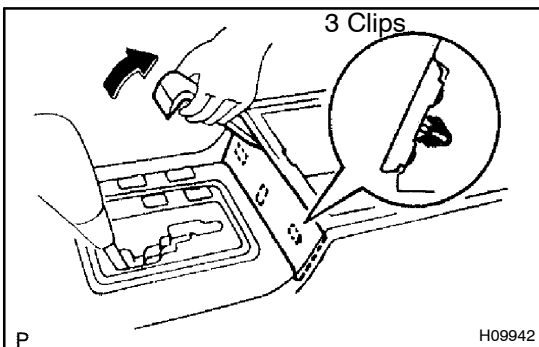
- (a) Remove the screw.
- (b) Using a moulding remover, remove the rear room light assembly.
- (c) Disconnect the connector.
- (d) Employ the same manner described above to the other side.

**26. REMOVE INSTRUMENT PANEL UNDER NO.1 COVER**

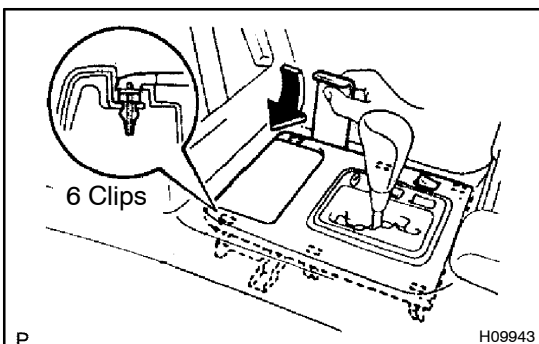
Remove the 2 screws and instrument panel under No.1 cover.

**27. REMOVE INSTRUMENT PANEL UNDER NO.2 COVER**

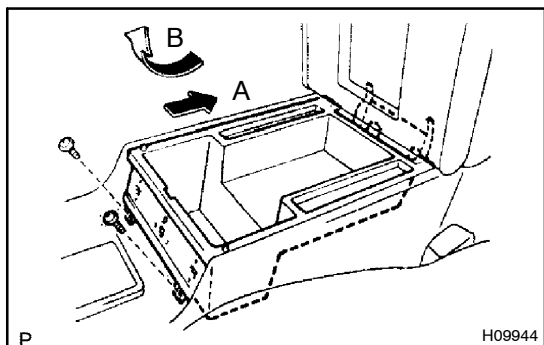
Remove the instrument panel under No.2 cover.

**28. REMOVE SHIFTING HOLE COVER**

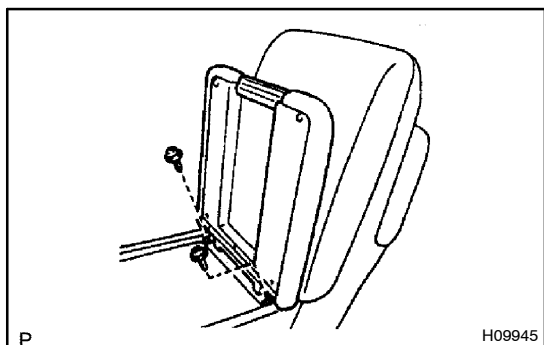
Using a moulding remover, remove the shifting hole cover, then disconnect the connector.

**29. REMOVE CONSOLE UPPER PANEL ASSEMBLY**

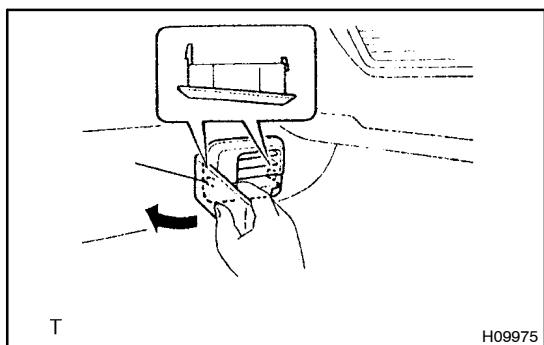
Using a moulding remover, remove the console upper panel assembly, then disconnect the connector.

**30. REMOVE FRONT CONSOLE BOX**

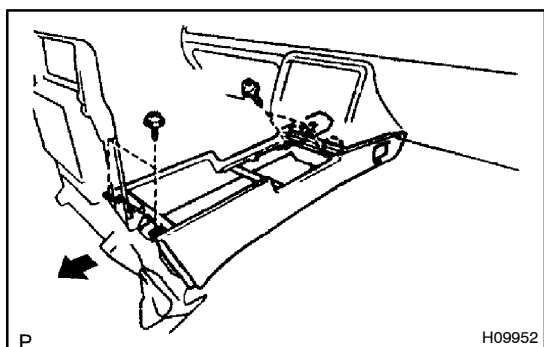
Remove the 2 screws and console front box as shown in the illustration.

**31. REMOVE REAR CONSOLE ARMREST**

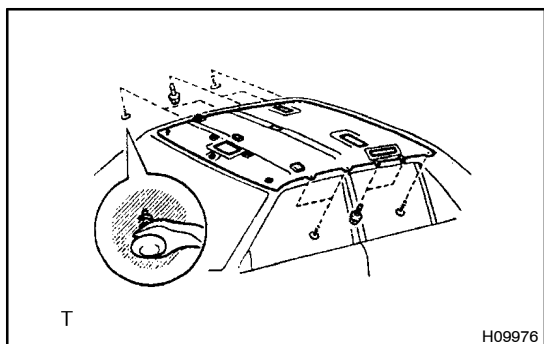
Remove the 2 screws and rear console armrest.

**32. REMOVE HEATER TO FOOT NO.3 DUCT**

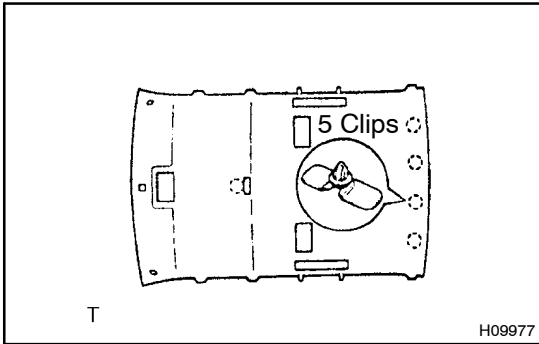
- (a) Using a moulding remover, remove the heater to foot No.3 duct as shown in the illustration.
- (b) Employ the same manner described above to the other side.

**33. REMOVE CONSOLE FRONT BOX ASSEMBLY**

Remove the 4 screws and console front box assembly.

**34. REMOVE ROOF HEADLINING**

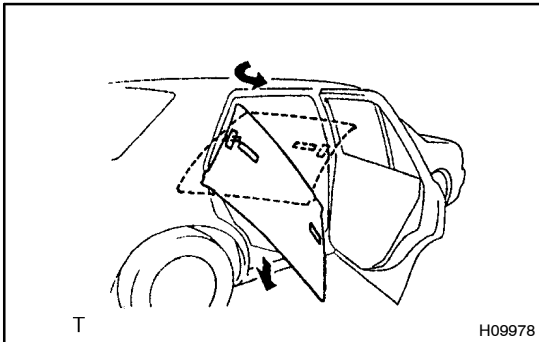
- (a) Remove the 4 bolts.
- (b) Using a clip remover, remove the 6 clips.



(c) Using a screwdriver, remove the roof headlining.

HINT:

Tape the screwdriver tip before use.



(d) Bring out the roof headlining as shown in the illustration.