

REMOVAL

1. REMOVE AIR CLEANER INLET NO.1 AND V-BANK COVER
2. REMOVE AIR CLEANER ASSEMBLY WITH AIR FLOW METER LH
3. REMOVE V-RIBBED BELT (See page CO-5)
4. REMOVE HYDRAULIC MOTOR GEAR PUMP
 - (a) Disconnect the connector.
 - (b) Disconnect the hydraulic motor suction hose.
 - (c) Remove the union bolt and gasket, and disconnect the hydraulic pressure hose.
 - (d) Remove the 3 bolts and hydraulic motor gear pump.