

# TROUBLESHOOTING

## PROBLEM SYMPTOMS TABLE

PR02W-05

Symptom	Suspect Area	See page
Noise	1. Center bearing (Worn) 2. Flexible rubber coupling (Worn) 3. Spider bearing (Worn or stuck)	<a href="#">PR-6</a> <a href="#">PR-6</a> <a href="#">PR-7</a>
Vibration	1. Transmission extension housing rear bushing (Worn) 2. Flexible coupling (Worn) 3. Propeller shaft (Runout) 4. Propeller shaft (Imbalance)	- <a href="#">PR-6</a> <a href="#">PR-7</a> -