


REMOVAL

1. REMOVE FRONT PNEUMATIC CYLINDER
(See page SA-22)
2. REMOVE UPPER SUSPENSION ARM
 - (a) Remove the bolt and disconnect the ABS speed sensor wire harness clamp from the upper suspension arm.

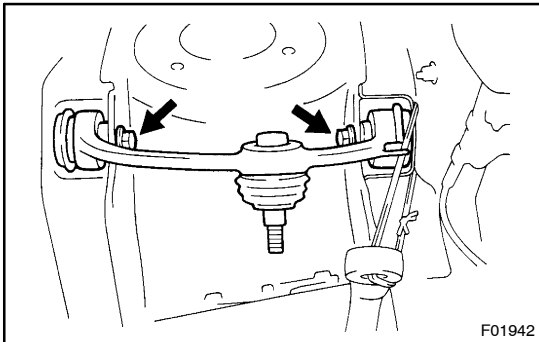

- (b) Remove the 2 bolts and the upper suspension arm.